
A3s Blocking w/ Squash Blocks

Use double squash blocks as specified: squash blocks must be cut 1/16" taller than I-Joist. 2x4 minimum

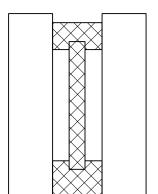

Blocking Panels

Stagger 8d or 10d box nails to avoid splitting

8d nail at 6" o.c.

(when used for shear transfer nail to bearing plate with same nailing schedule as decking)