


A6I

# I-JOIST AS STARTER JOIST

**8d nail at 6" o.c.**

(when used for shear transfer  
nail to bearing plate with same  
nailing schedule as decking)

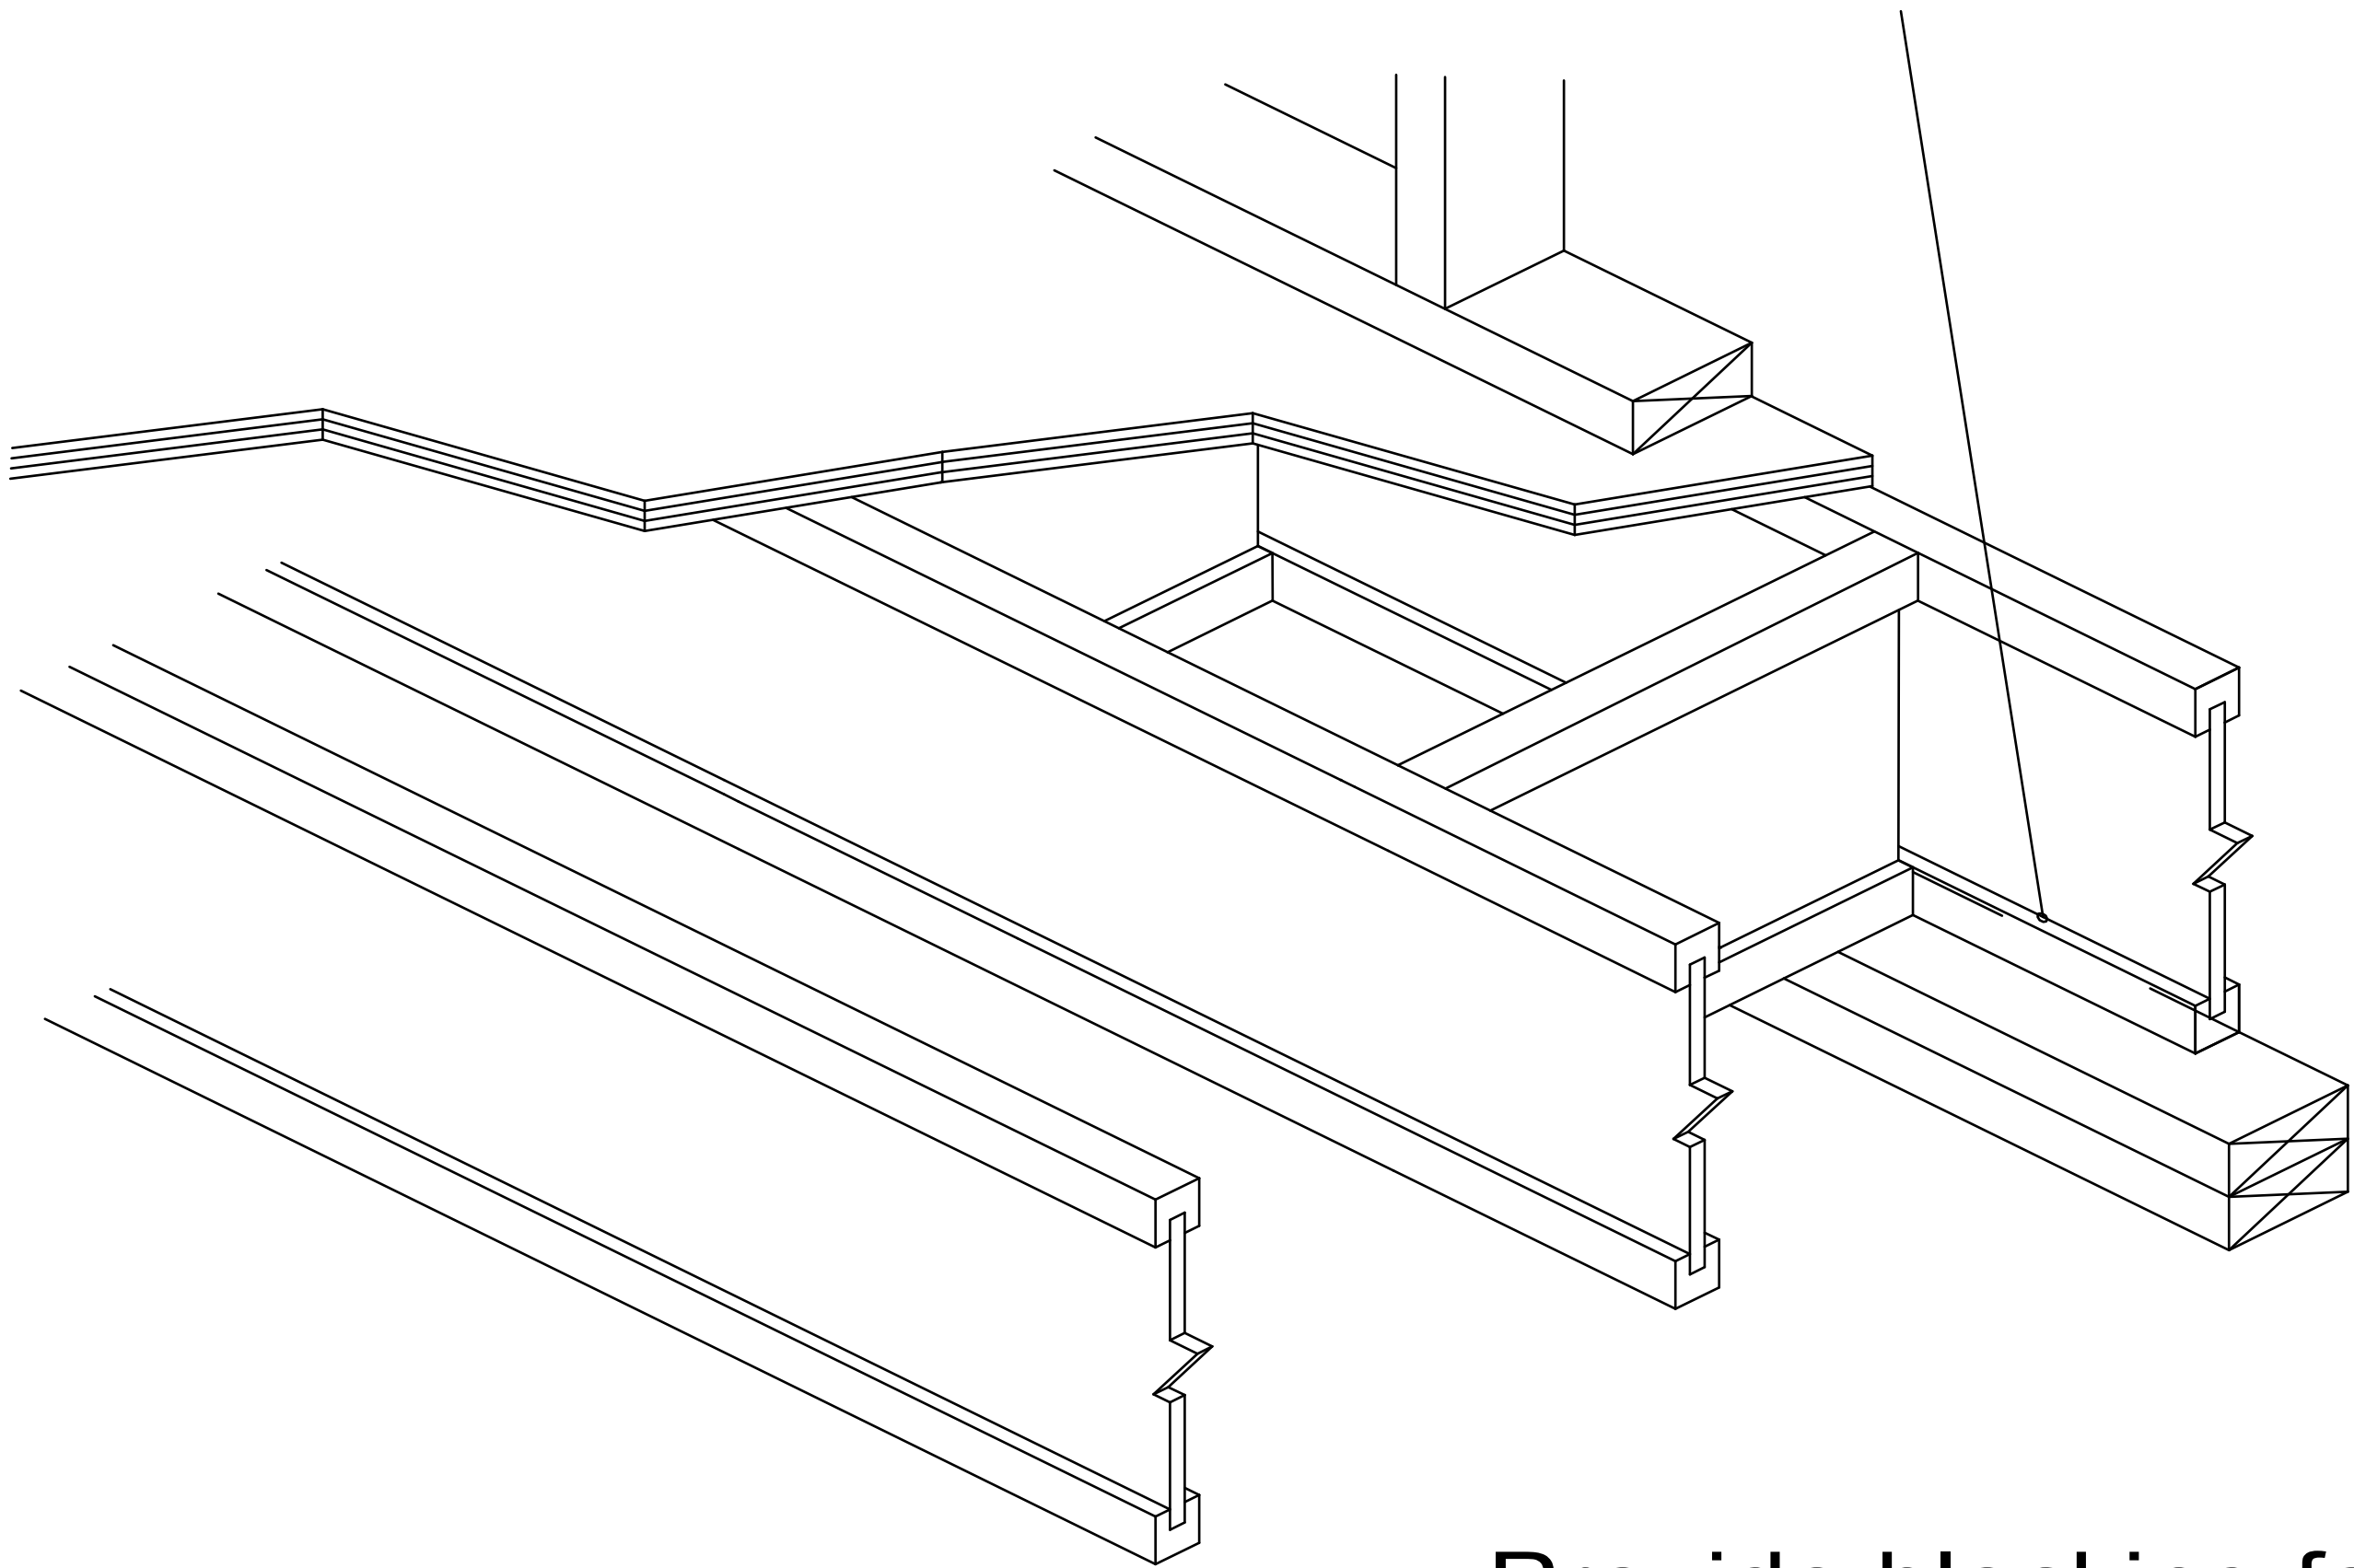

**Provide blocking for  
lateral support as required. Use LP I-Joist,  
LP LVL, LP LSL, or LP Rim Board as blocking**