


A71b

# SOLID RIM AS STARTER JOIST with Ladder Blocking

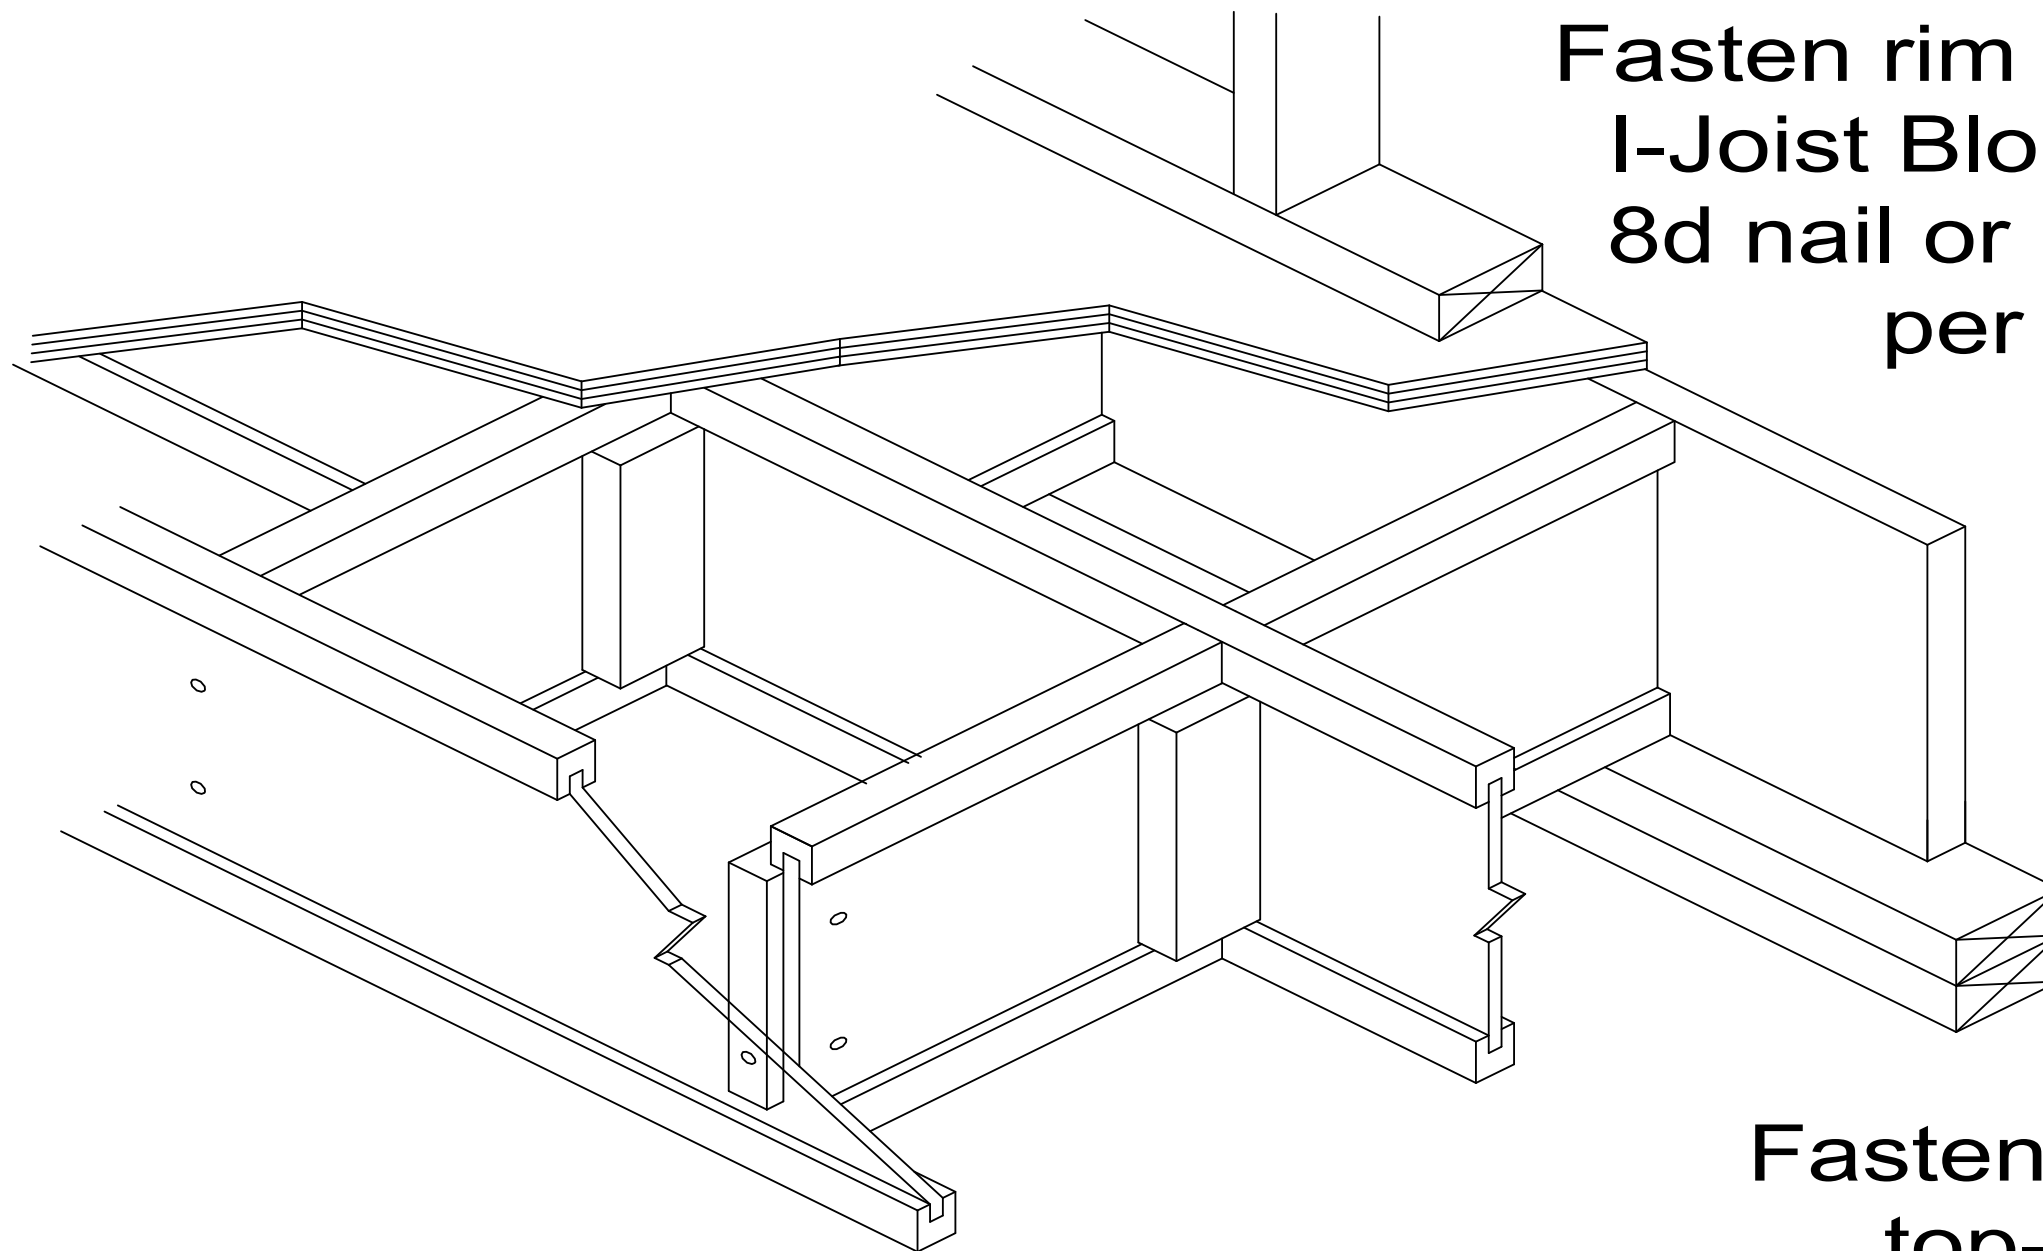

Fasten rim board to each  
I-Joist Block using one  
8d nail or 10d box nail  
per flange

Fasten I-Joists to Connection Block  
with two (2) 8d box nails through the  
web and into the block.

Fasten rim board to  
top-plate with  
8d nail at 6" o.c.  
(when used for shear transfer  
nail to bearing plate with same  
nailing schedule as decking)

Cut connection block such that there  
is a 1/8" gap between the block and  
the I-Joist flange- both top and bottom