
## **C**3

## REINFORCED CANTILEVER DETAIL

23/32" OSB (or equal) Both Sides

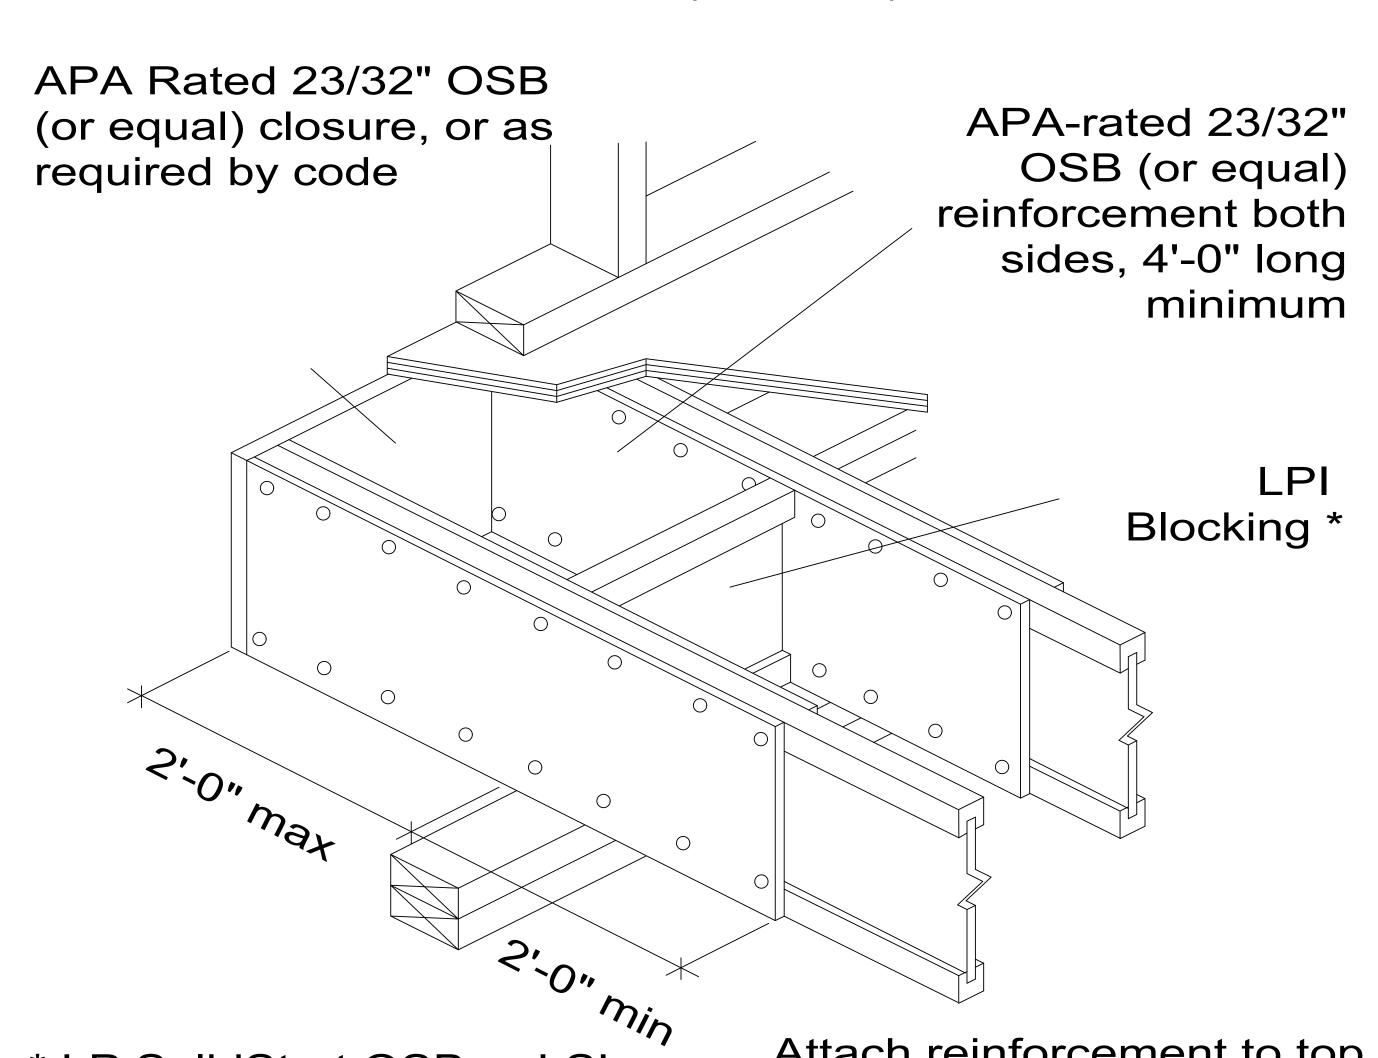

\* LP SolidStart OSB or LSL Rim Board may be used as Blocking

Attach reinforcement to top and bottom flanges with 8d nails at 6" o.c. both sides with nails staggered to avoid splitting