


C5

Cantilever Detail 1" or 1-1/8" LP SolidStart Rim Board Both Sides

APA Rated 23/32" OSB
(or equal) closure, or
as required by code

LP SolidStart Rim
Board Reinforcement
both sides, 4'-0" long
minimum

LPI
Blocking *

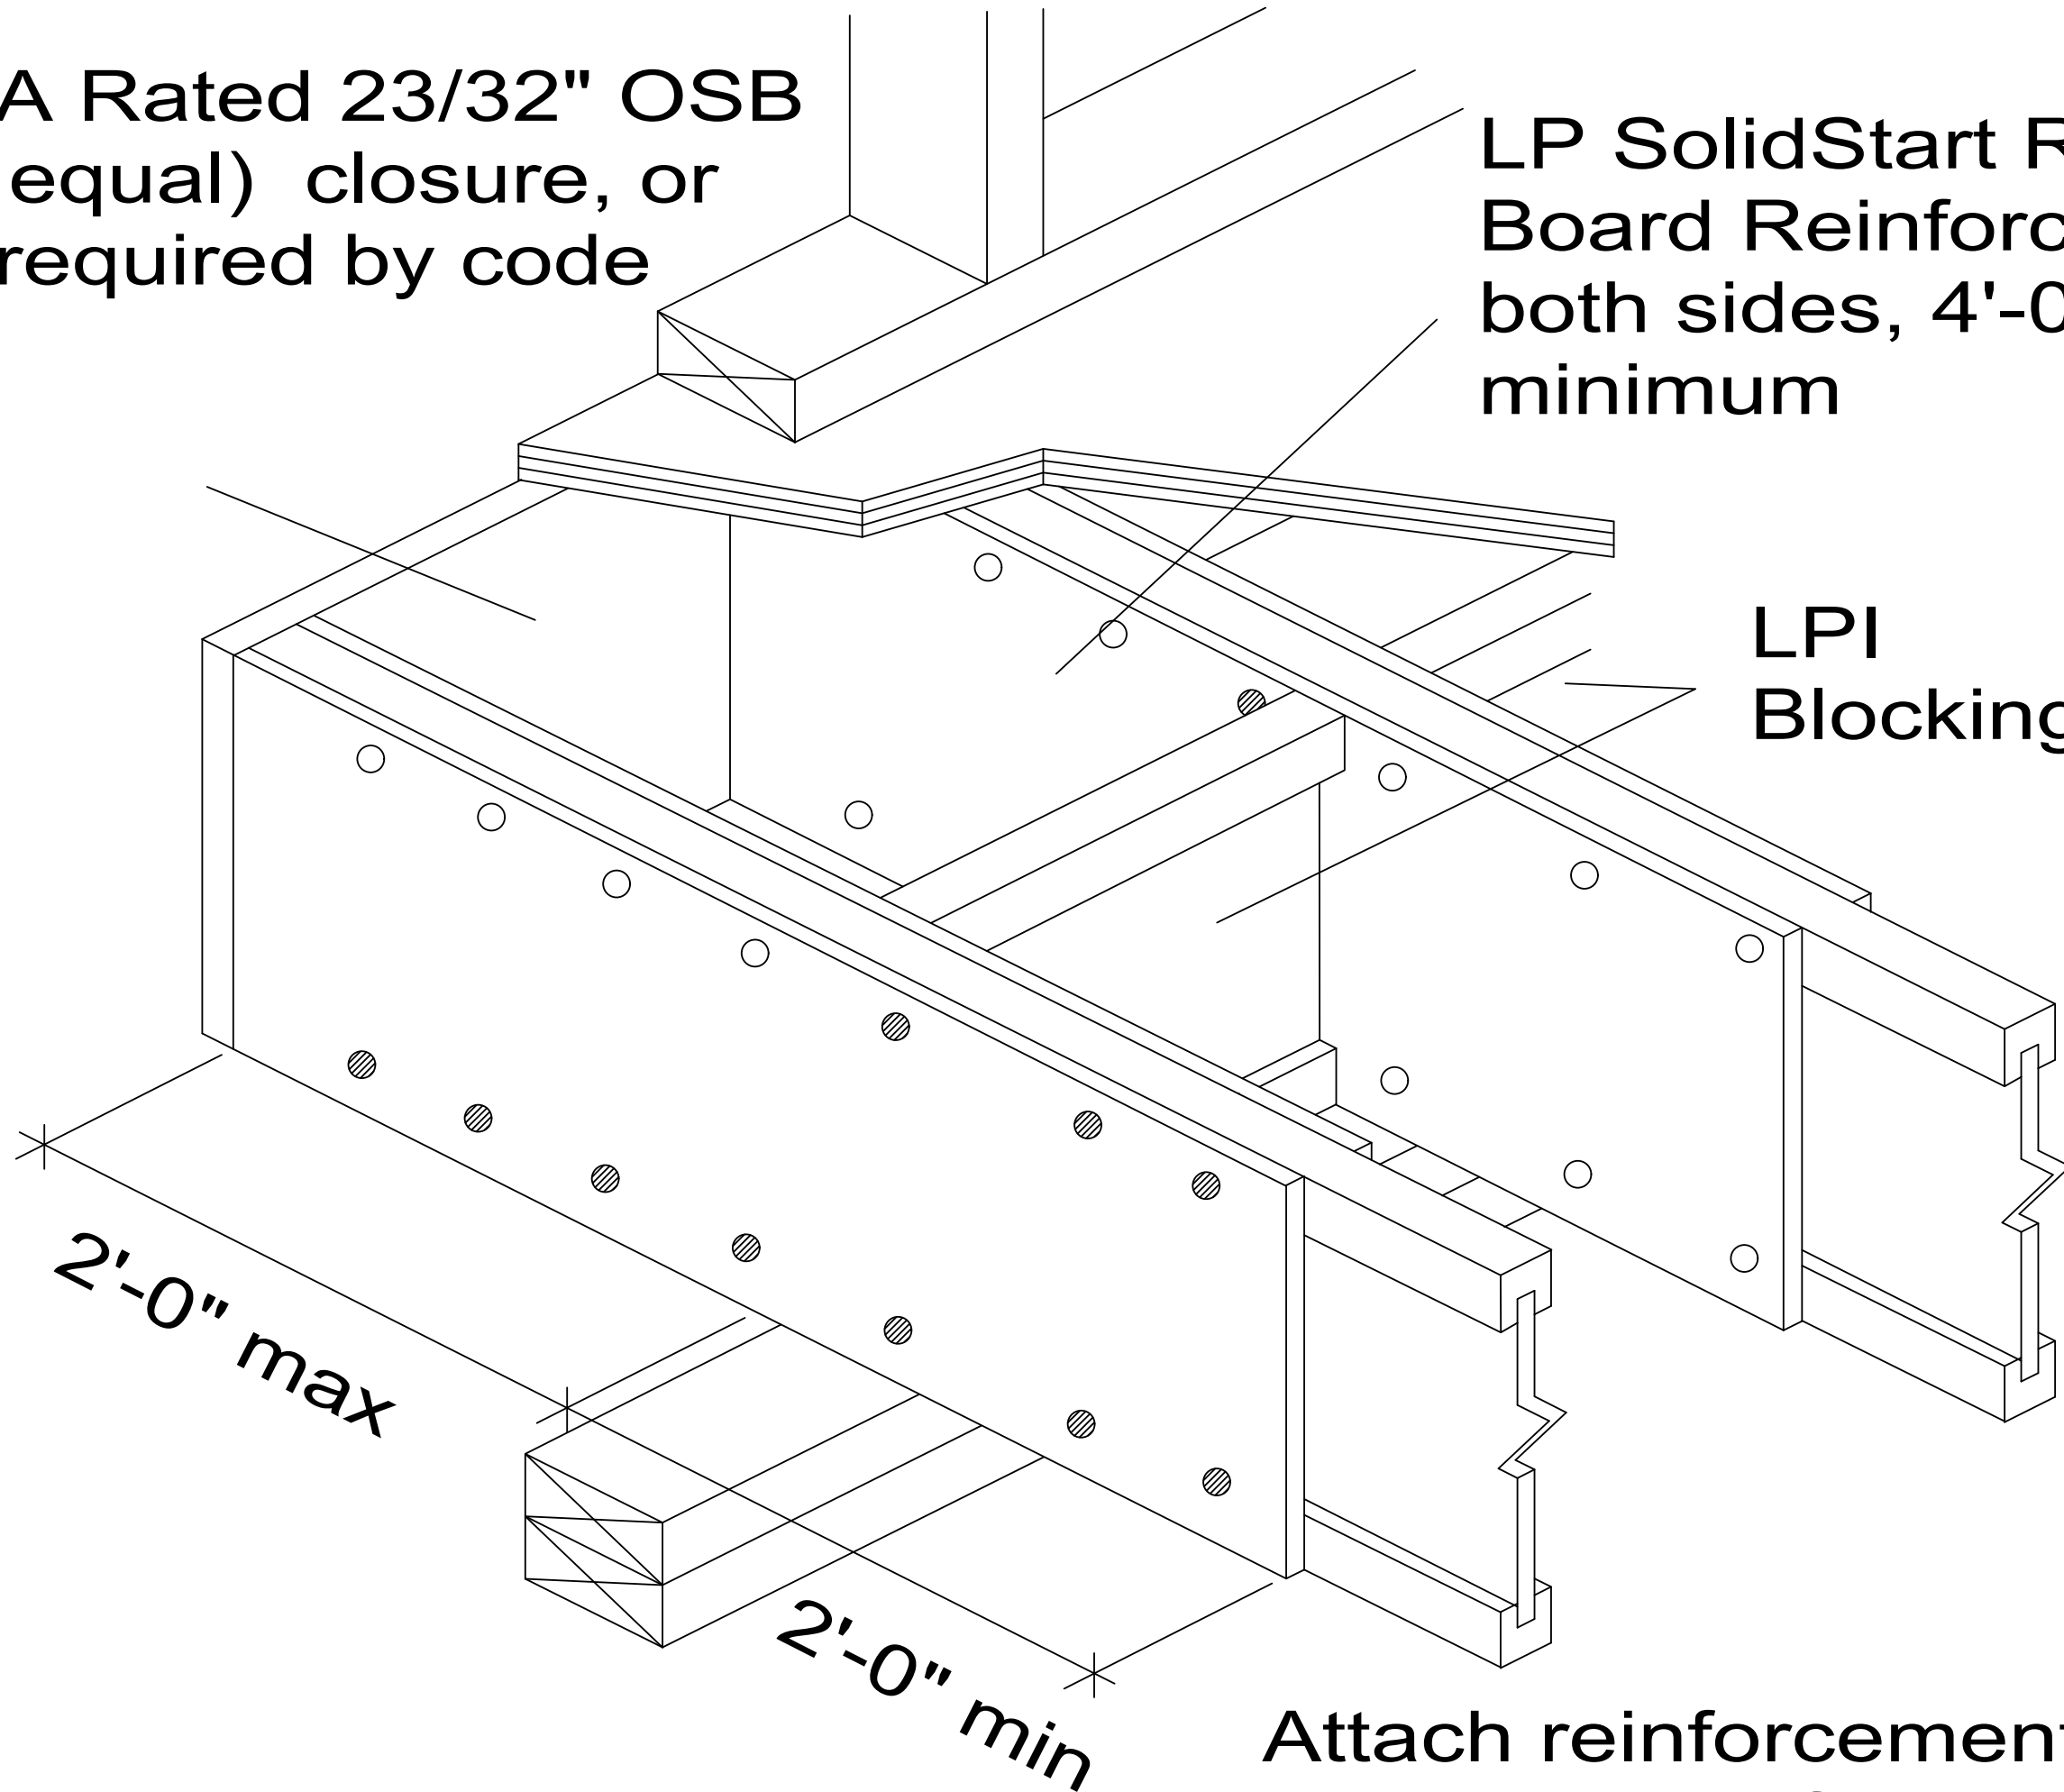

* LPI SolidStart OSB or LSL
Rim Board may be used
as Blocking

Attach reinforcement to
top and bottom flanges with
8d nails at 6" o.c. both sides
with nails staggered to
avoid splitting