


A7

SOLID RIM AS STARTER JOIST

8d nails at 6" o.c. toe-nailed
from outside of building.

(when used for shear transfer
nail to bearing plate with same
nailing schedule as decking)

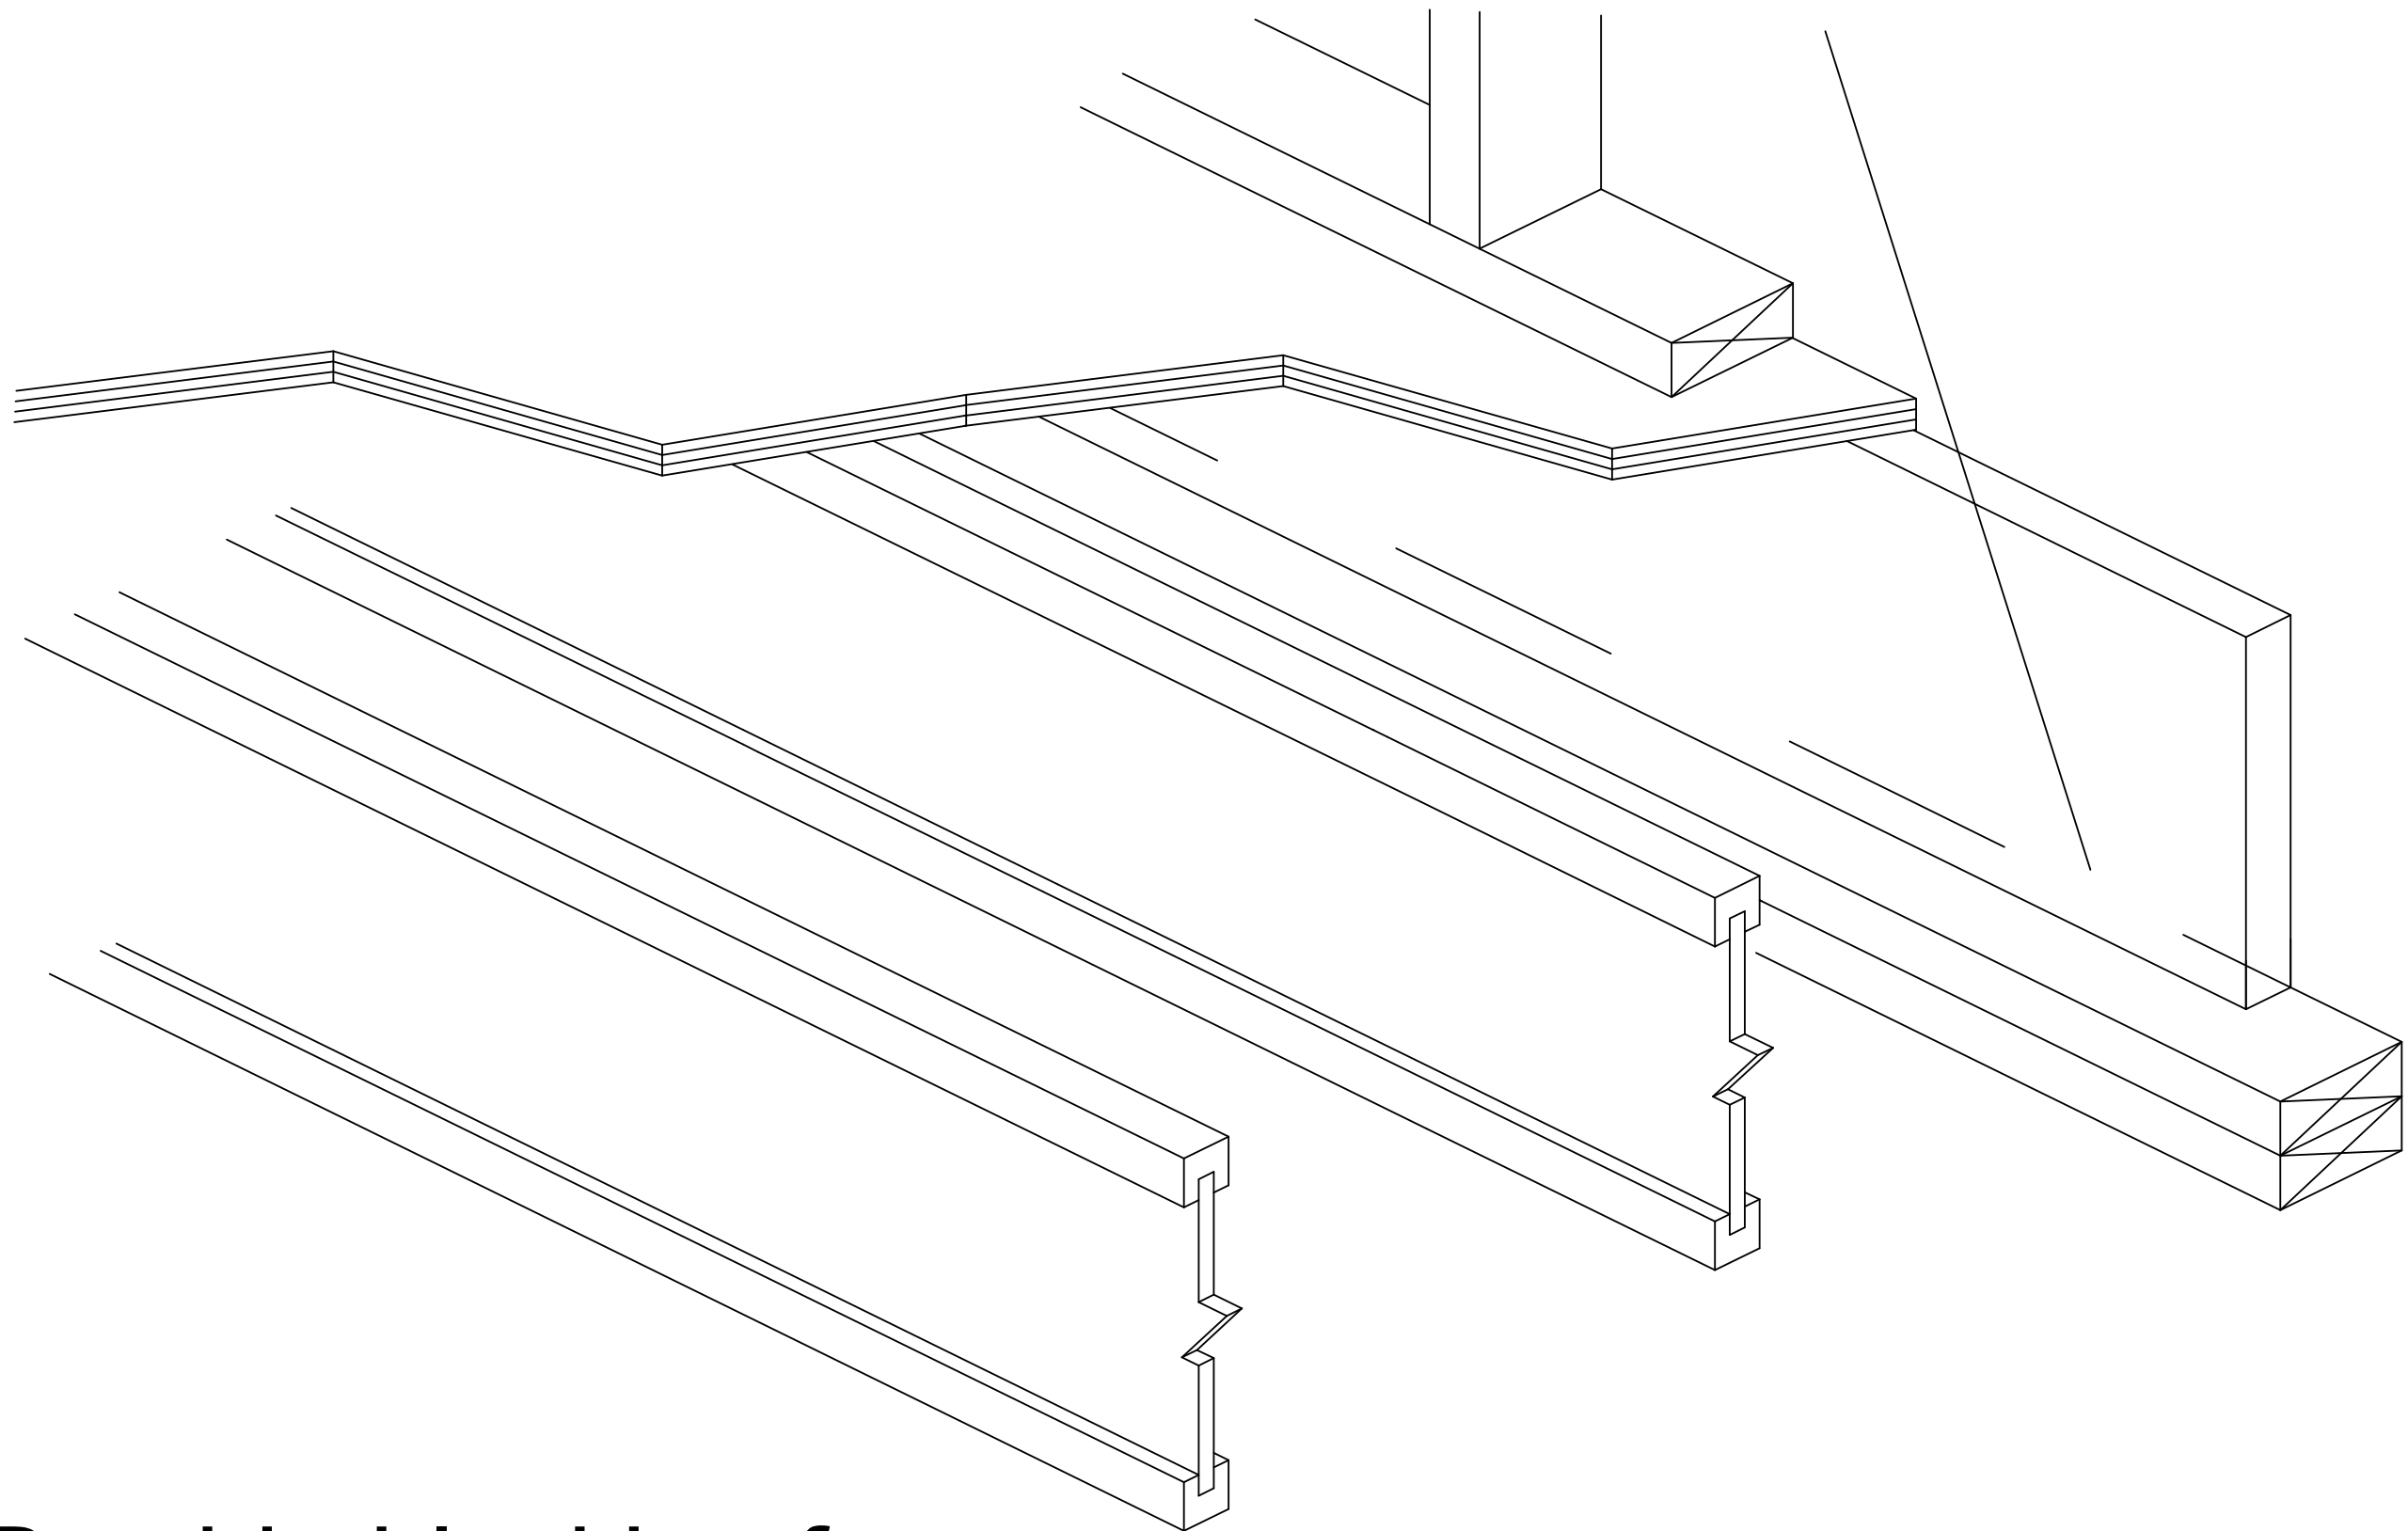

Provide blocking for
lateral support as required. Use LP I-Joist,
LP LVL, LP LSL, or LP Rim Board as blocking