


A7i

# SOLID RIM AS START JOIST w/ Additional I-Joist

8d nails at 6" o.c. toe-nailed  
from outside of building.

(when used for shear transfer nail to bearing  
plate with same nailing schedule as decking)

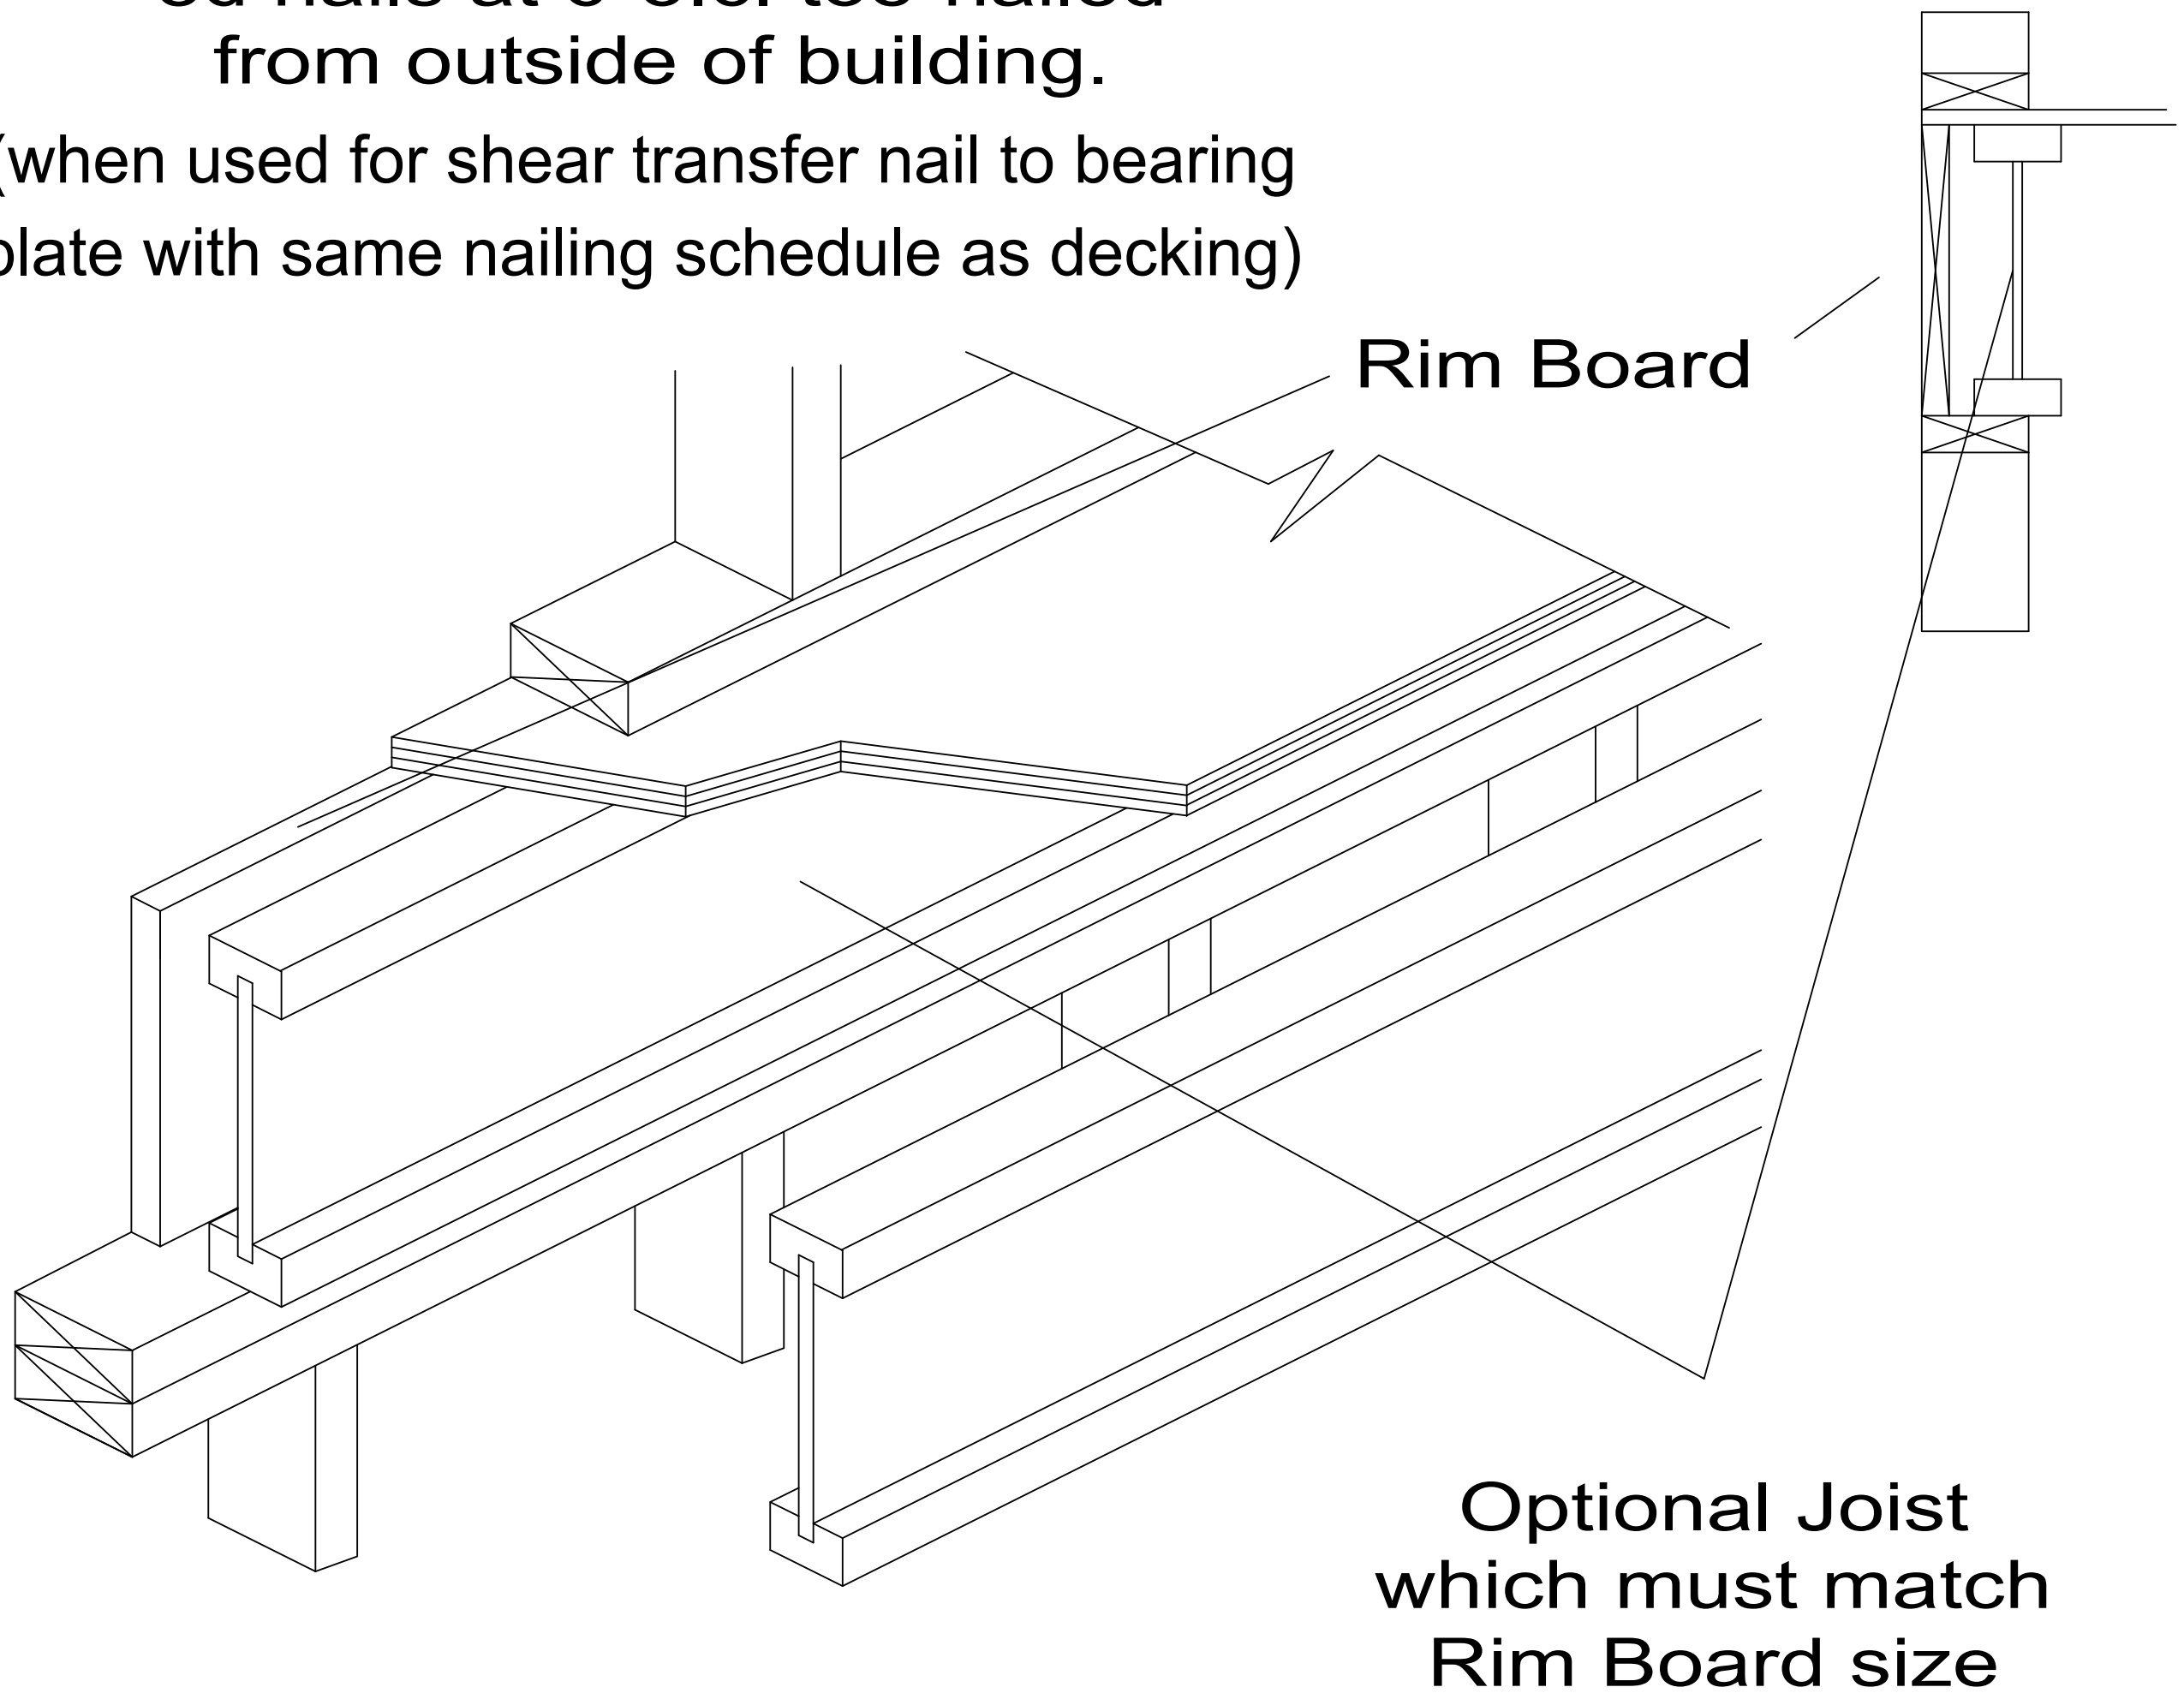

Provide blocking for  
lateral support as required. Use LP I-Joist,  
LP LVL, LP LSL, or LP Rim Board as blocking