


A7il

RIM BOARD AS STARTER JOIST w/ Additional I-Joist and Ladder Blocking

**8d nails at 6" o.c. toe-nailed
from outside of building.**

(when used for shear transfer nail to
bearing plate with same nailing schedule as decking)

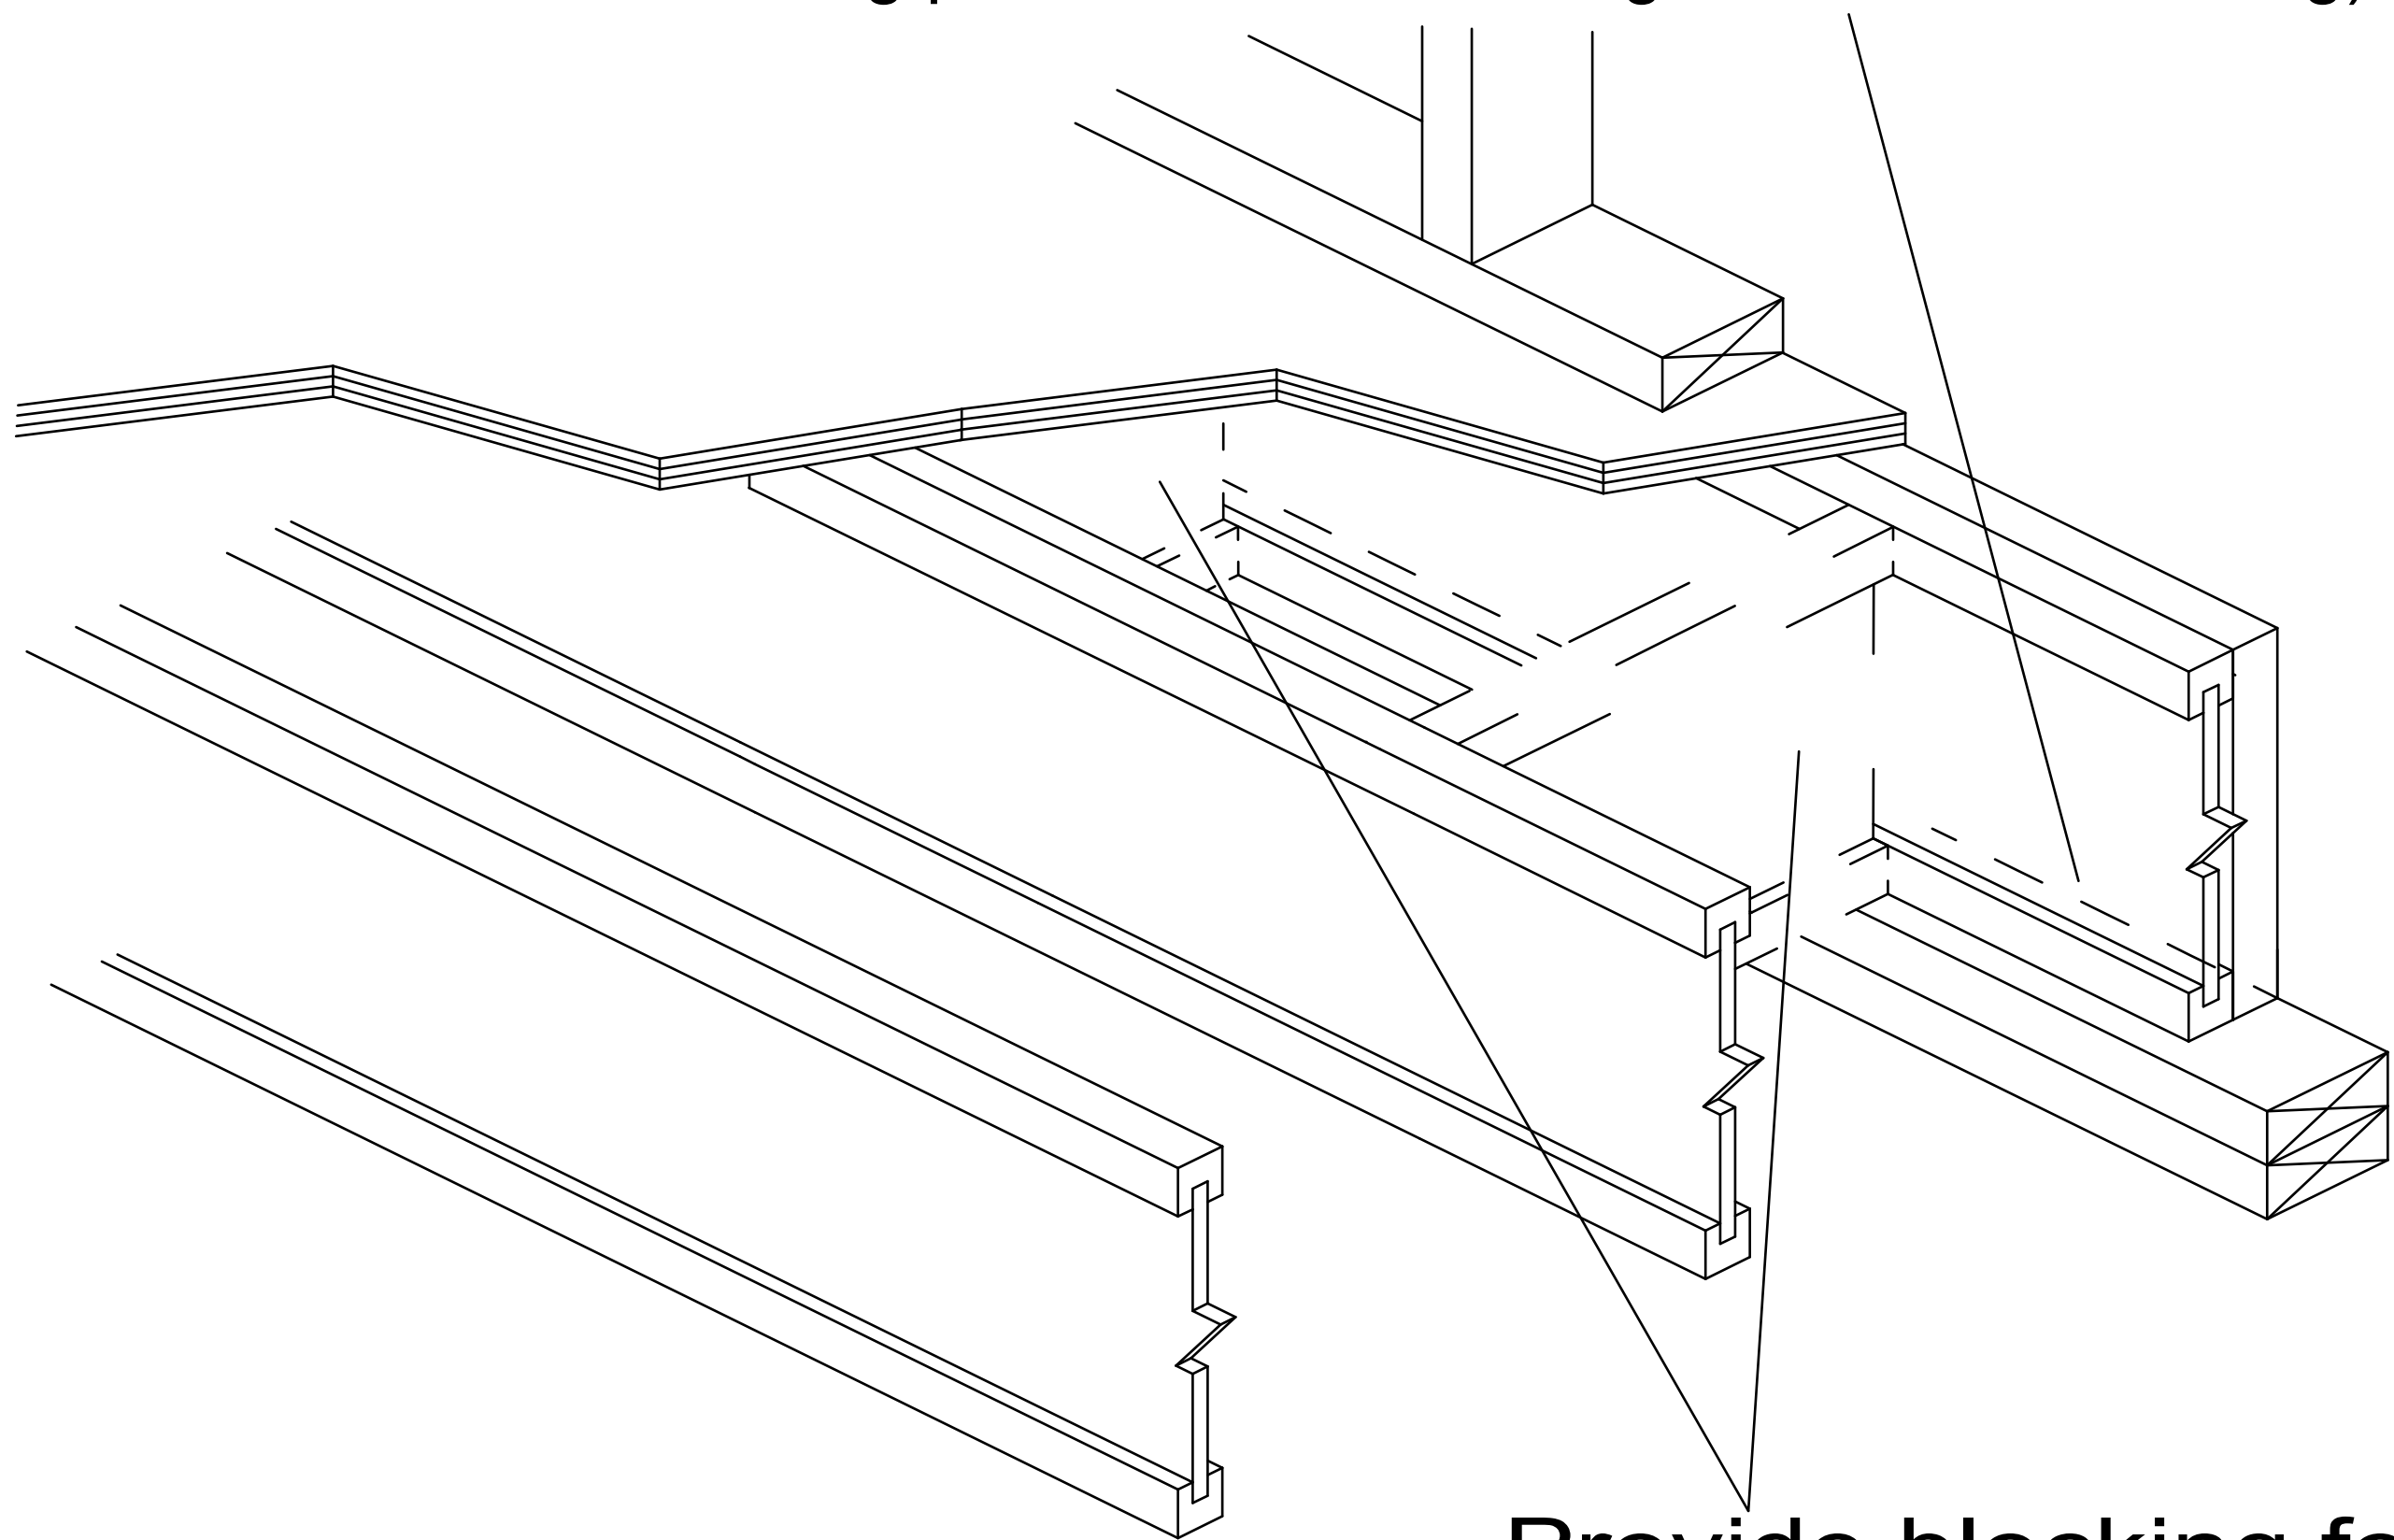

**Provide blocking for
lateral support as required. Use LP I-Joist,
LP LVL, LP LSL, or LP Rim Board as blocking**