


A71

SOLID RIM AS STARTER JOIST with Ladder Blocking

8d nails at 6" o.c. toe-nailed
from outside of building.

(when used for shear transfer nail to bearing
plate with same nailing schedule as decking)

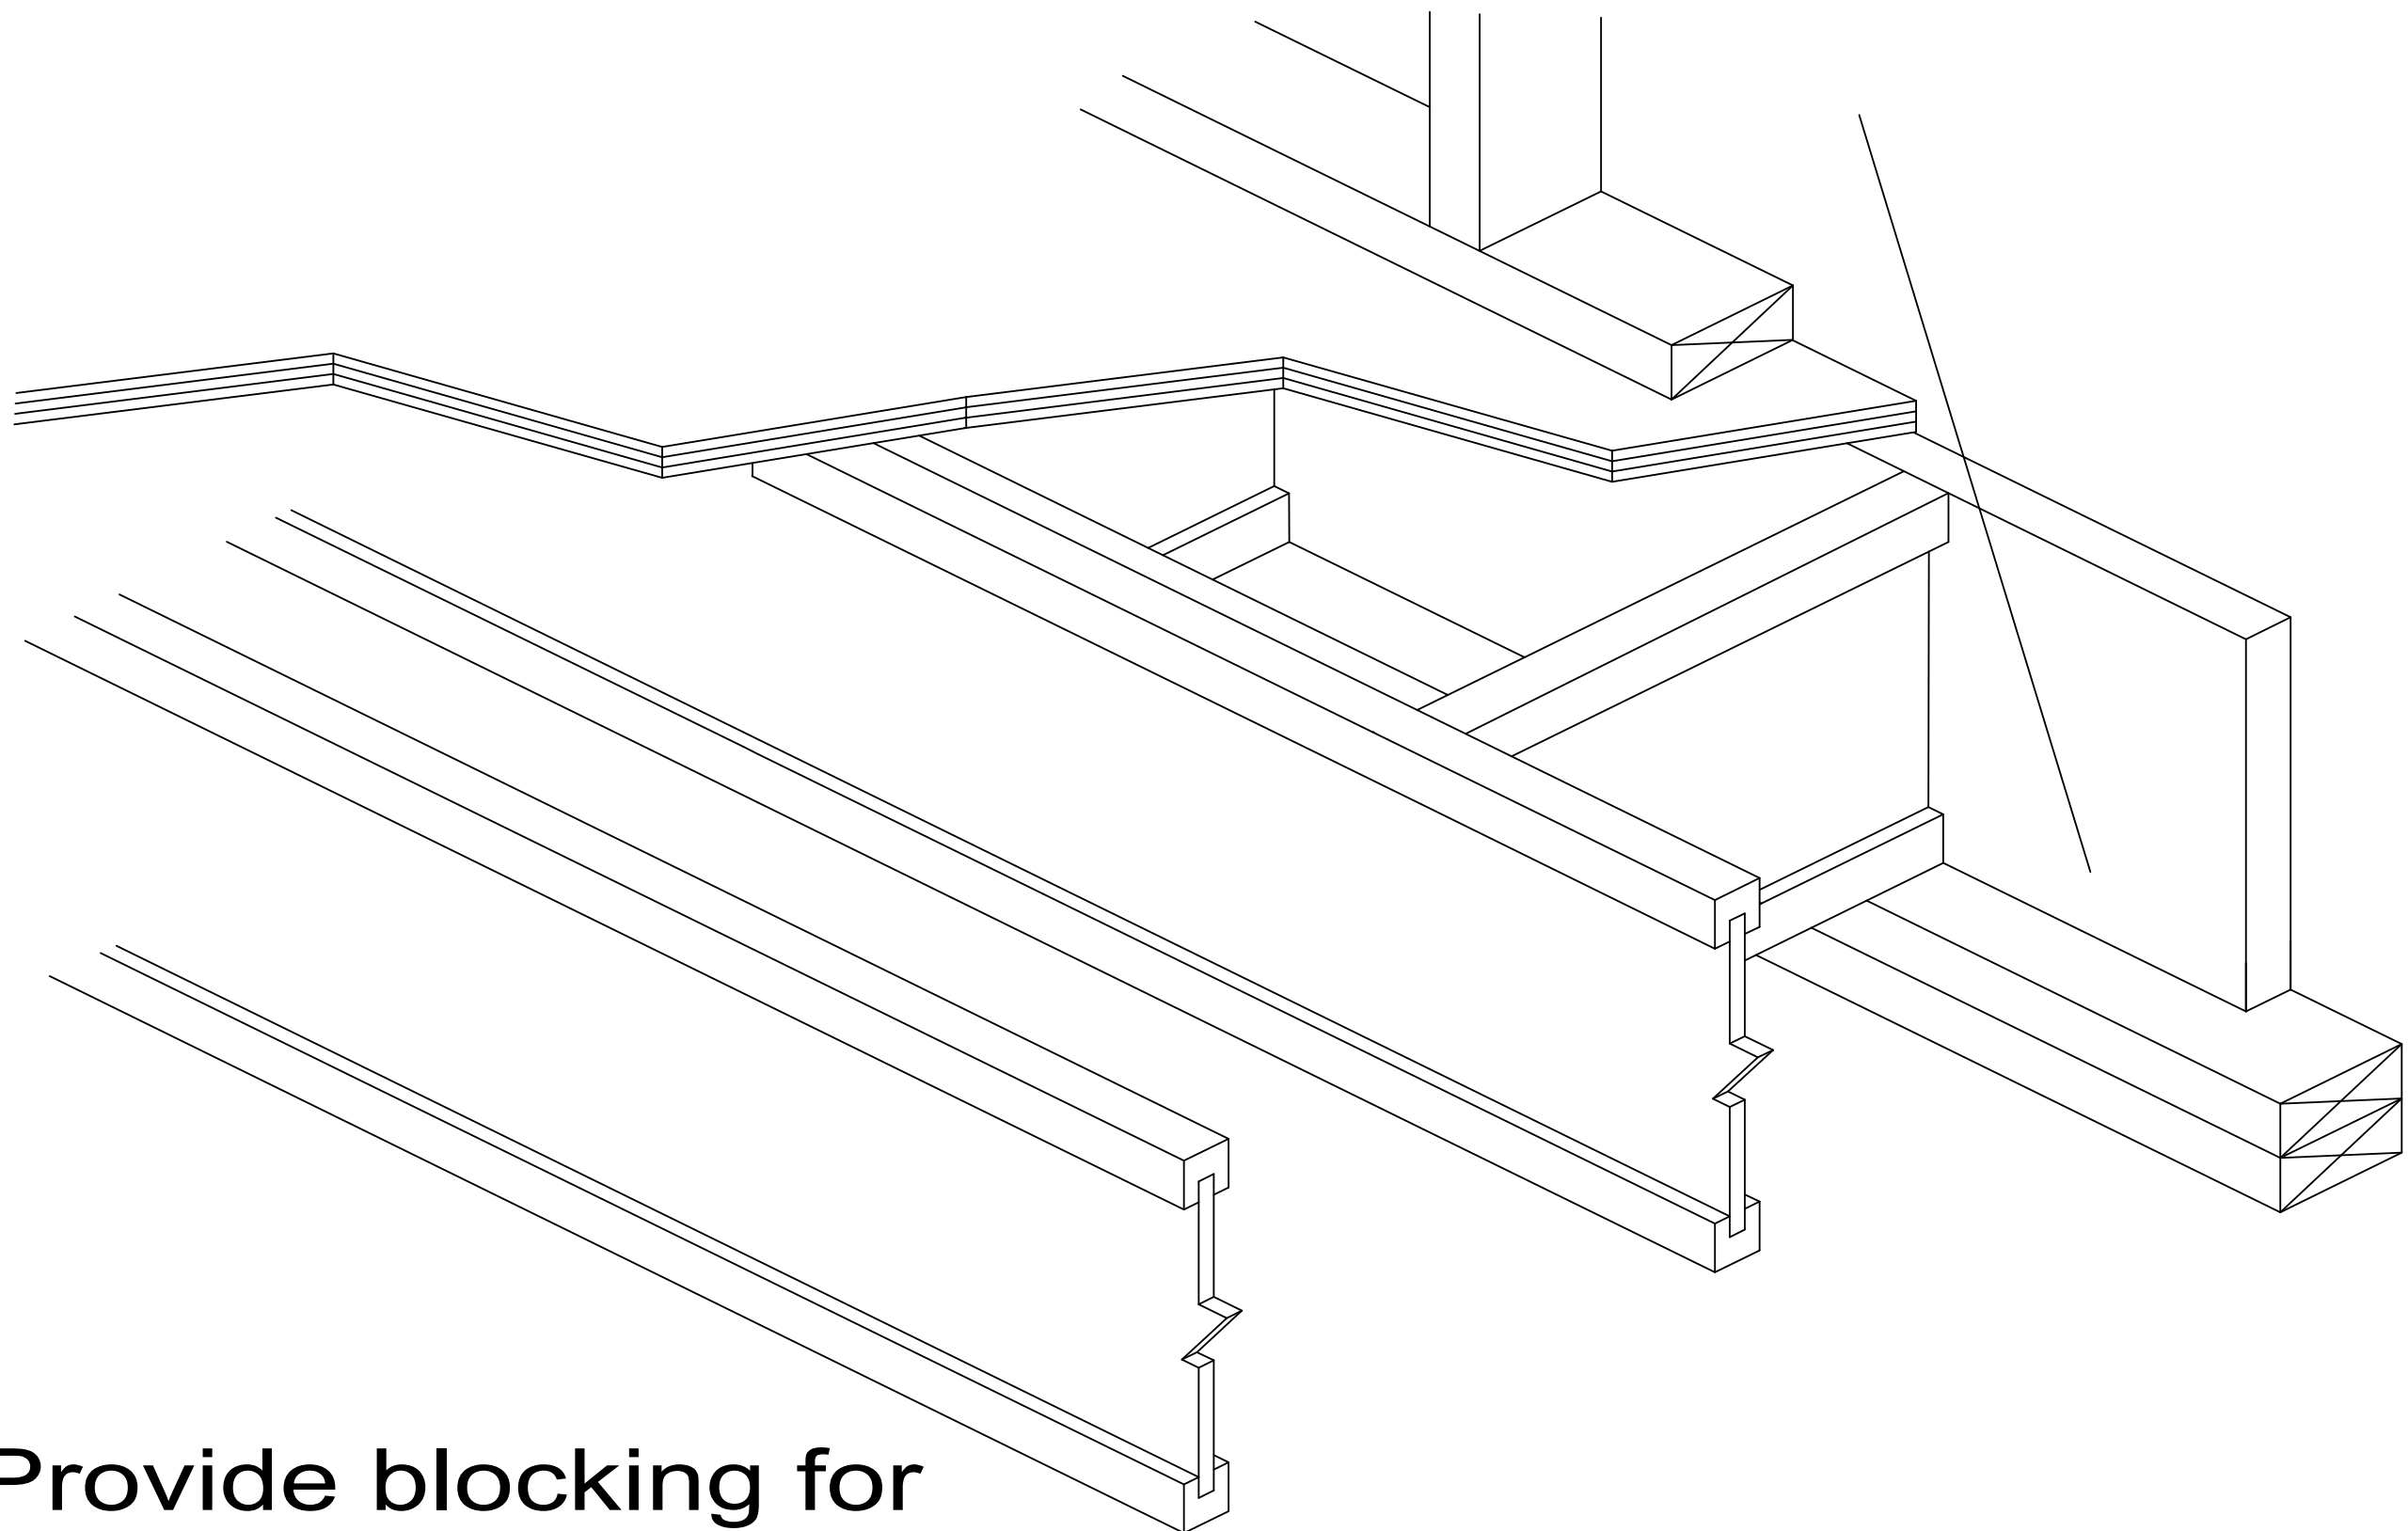

Provide blocking for
lateral support as required. Use LP I-Joist,
LP LVL, LP LSL, or LP Rim Board as blocking