


H2

BEVELED PLATE

LPI Blocking*

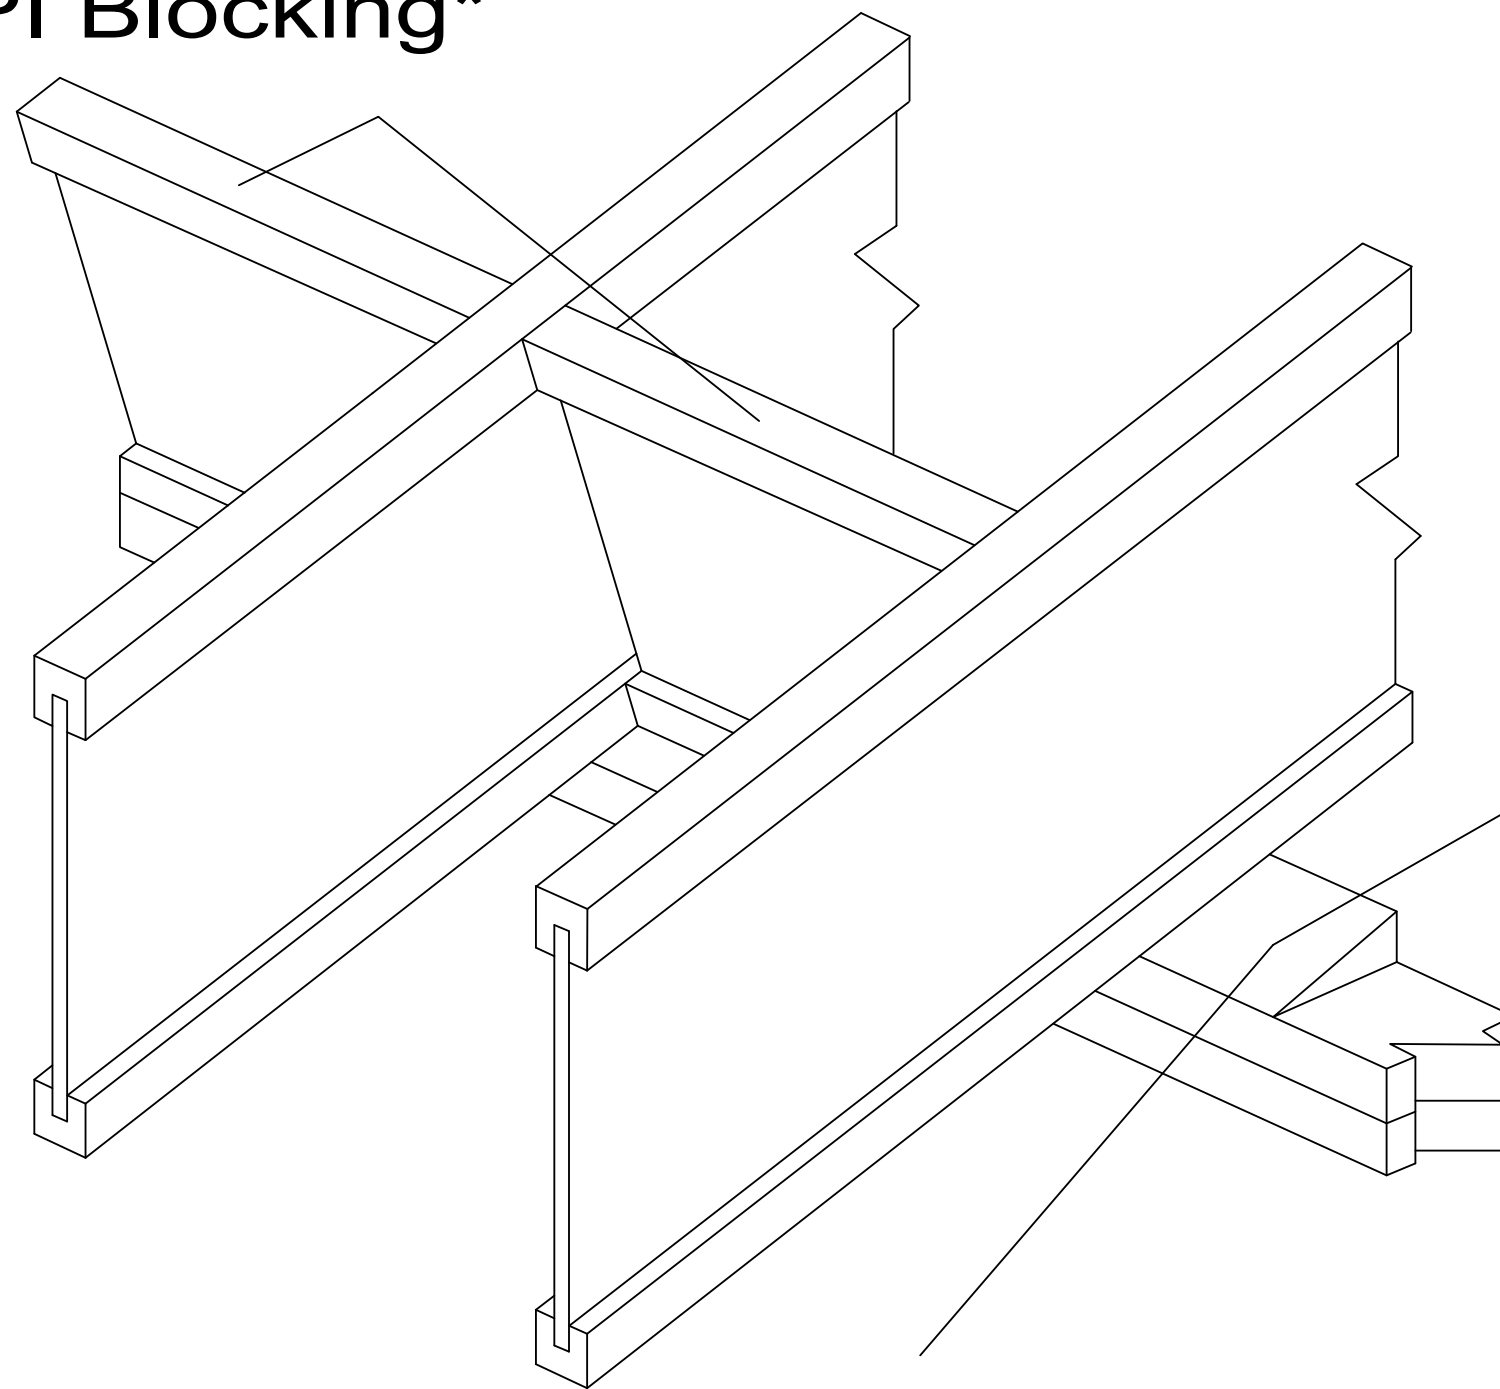

2 x beveled
plate

Simpson® VPA, USP® TMP, (or equal) connector may be substituted for beveled plate. Use of flat bearings or non-sloped hangers with sloped members is acceptable provided that the member pitch is less than or equal to 1/2" rise for 12" of run (0.5:12) or 2.39° degrees. Hanger design is the responsibility of the designer.

* Lateral resistance shall be provided. Other methods of restraint, such as full depth LP® SolidStart® OSB Rim, LSL, or LVL may be substituted for the LPI blocking shown.