


A1w

RIM BOARD w/ Web Stiffeners

Fasten rim board to each floor
I-Joist using one 8d box nail or
10d box nail per flange

Same depth as I-Joist

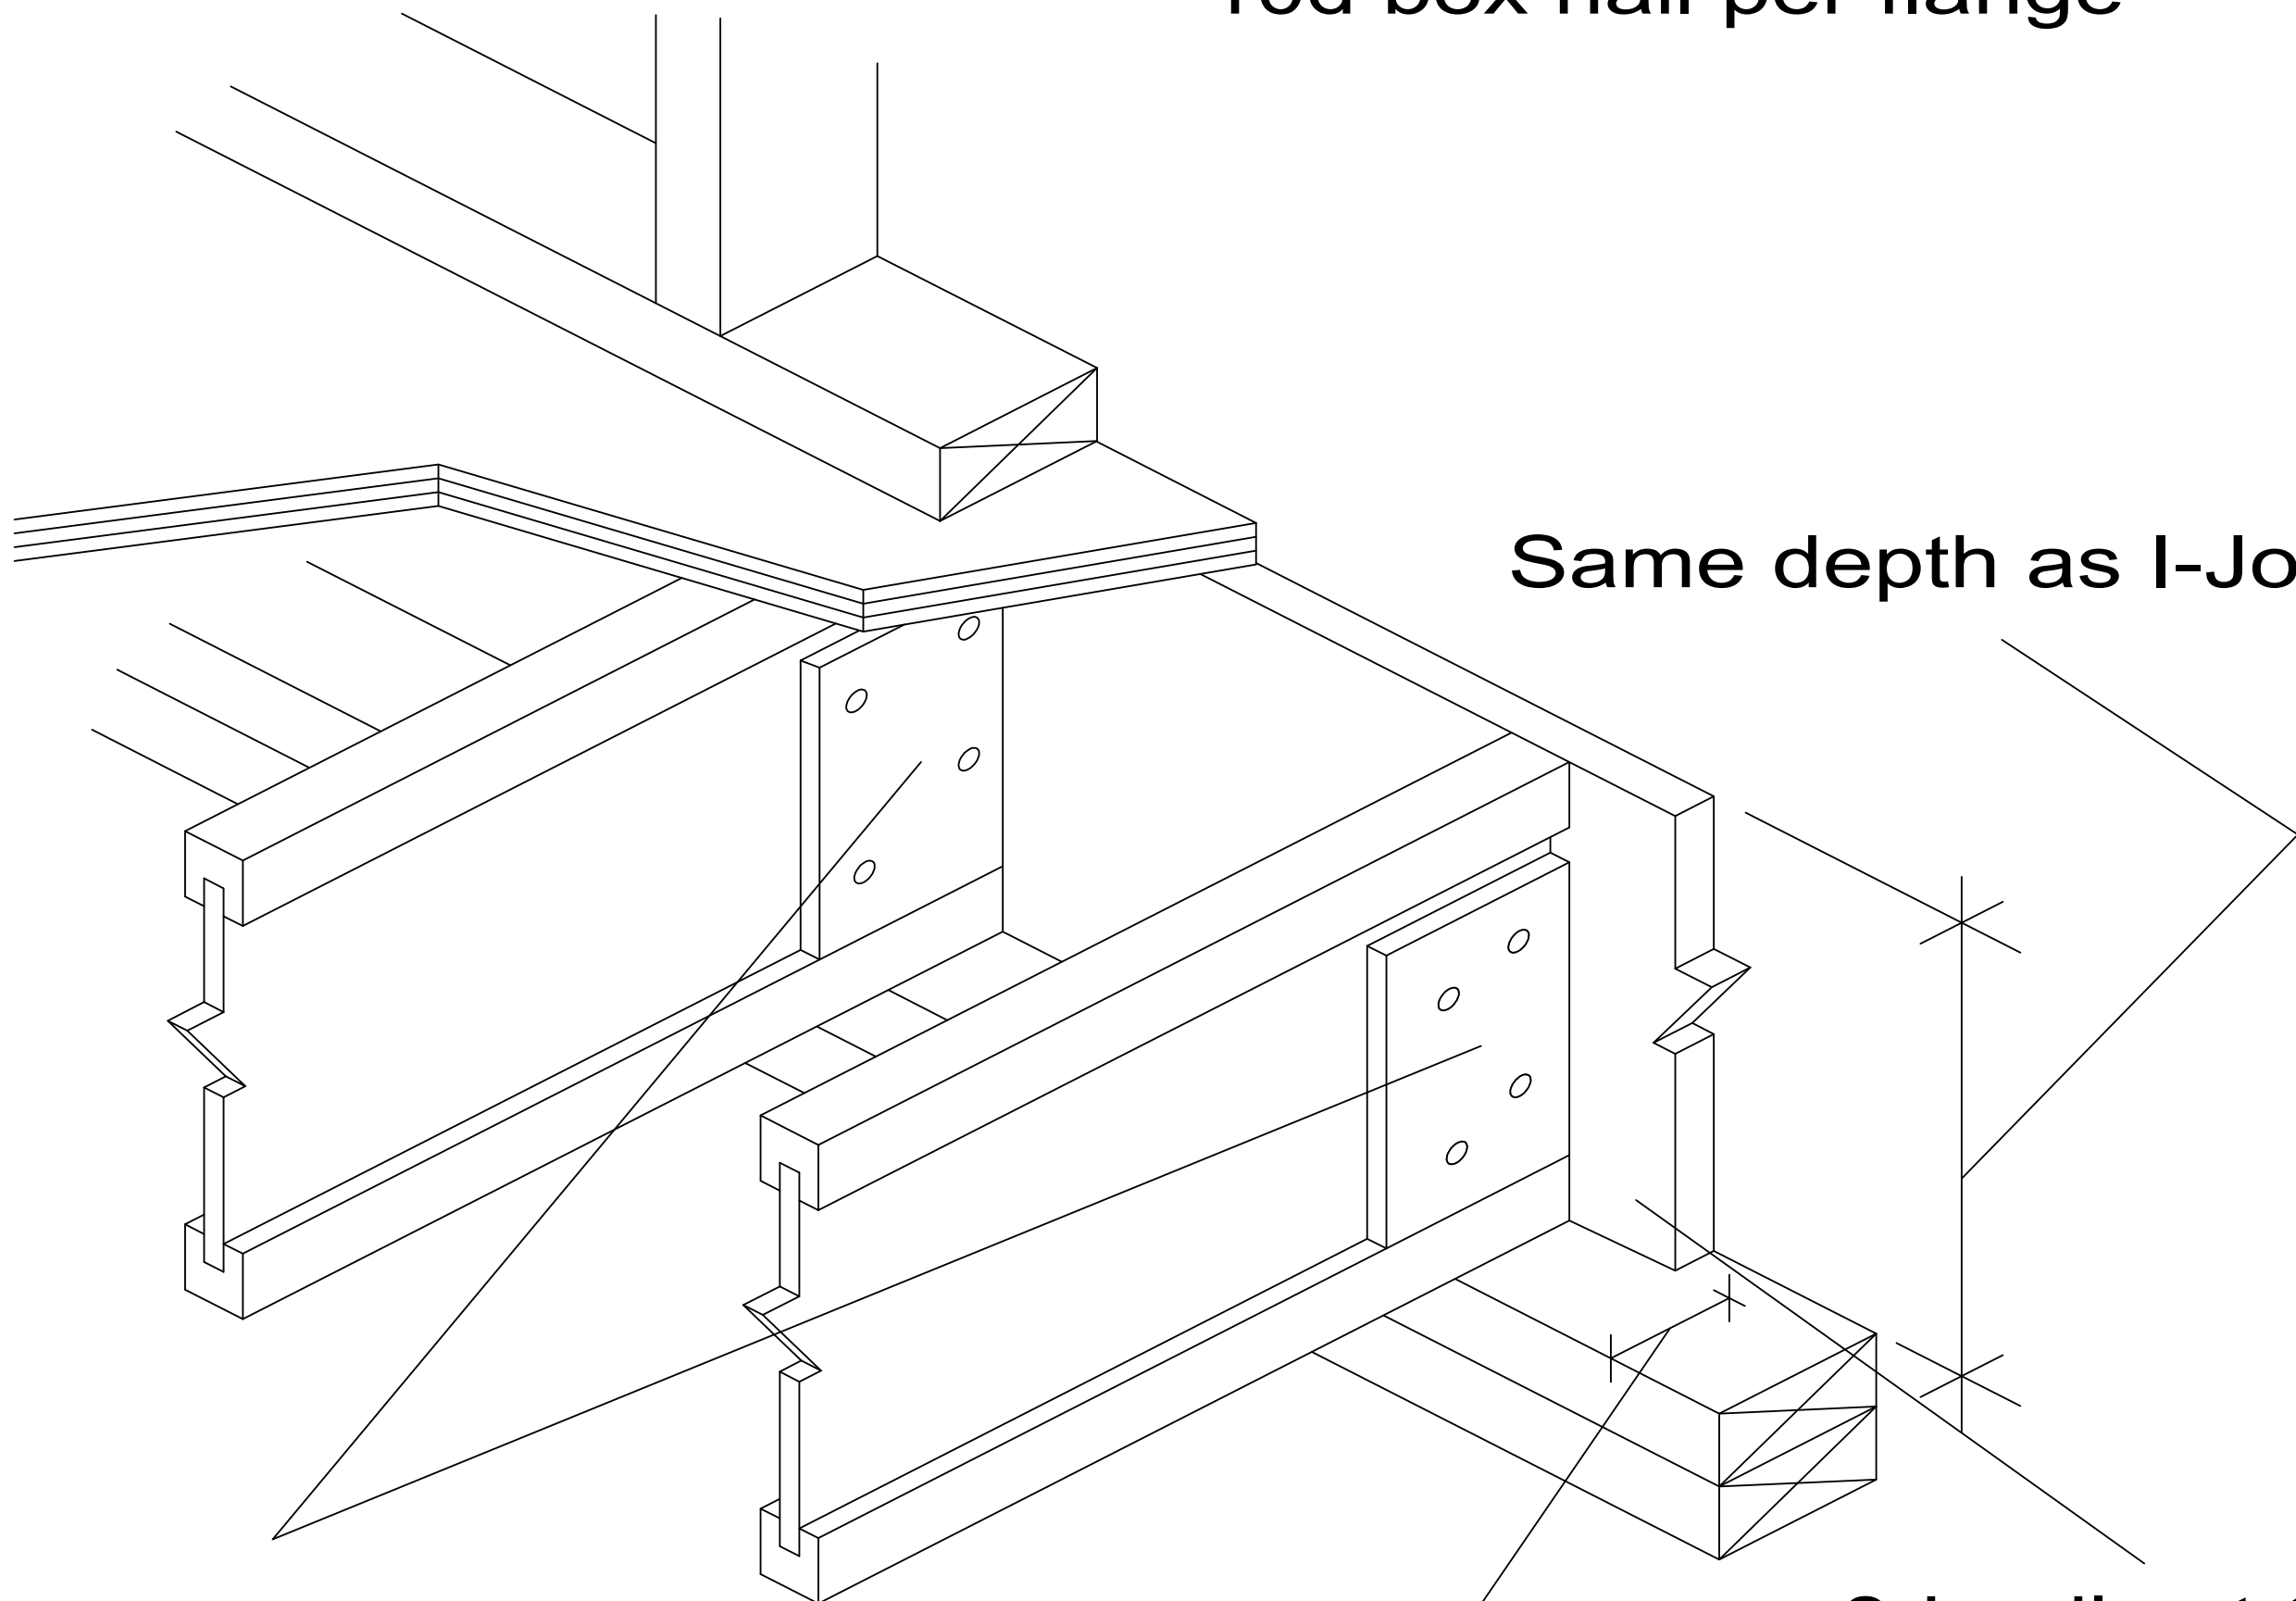

Web Stiffeners

Bearing
Length

8d nails at 6" oc
toe-nailed from
outside of building