


**B5**

# CHANGE IN JOIST DIRECTION at Interior Wall

Fasten OSB or LSL Rim Board to each floor I-Joist  
using one 8d or 10d box nail per flange

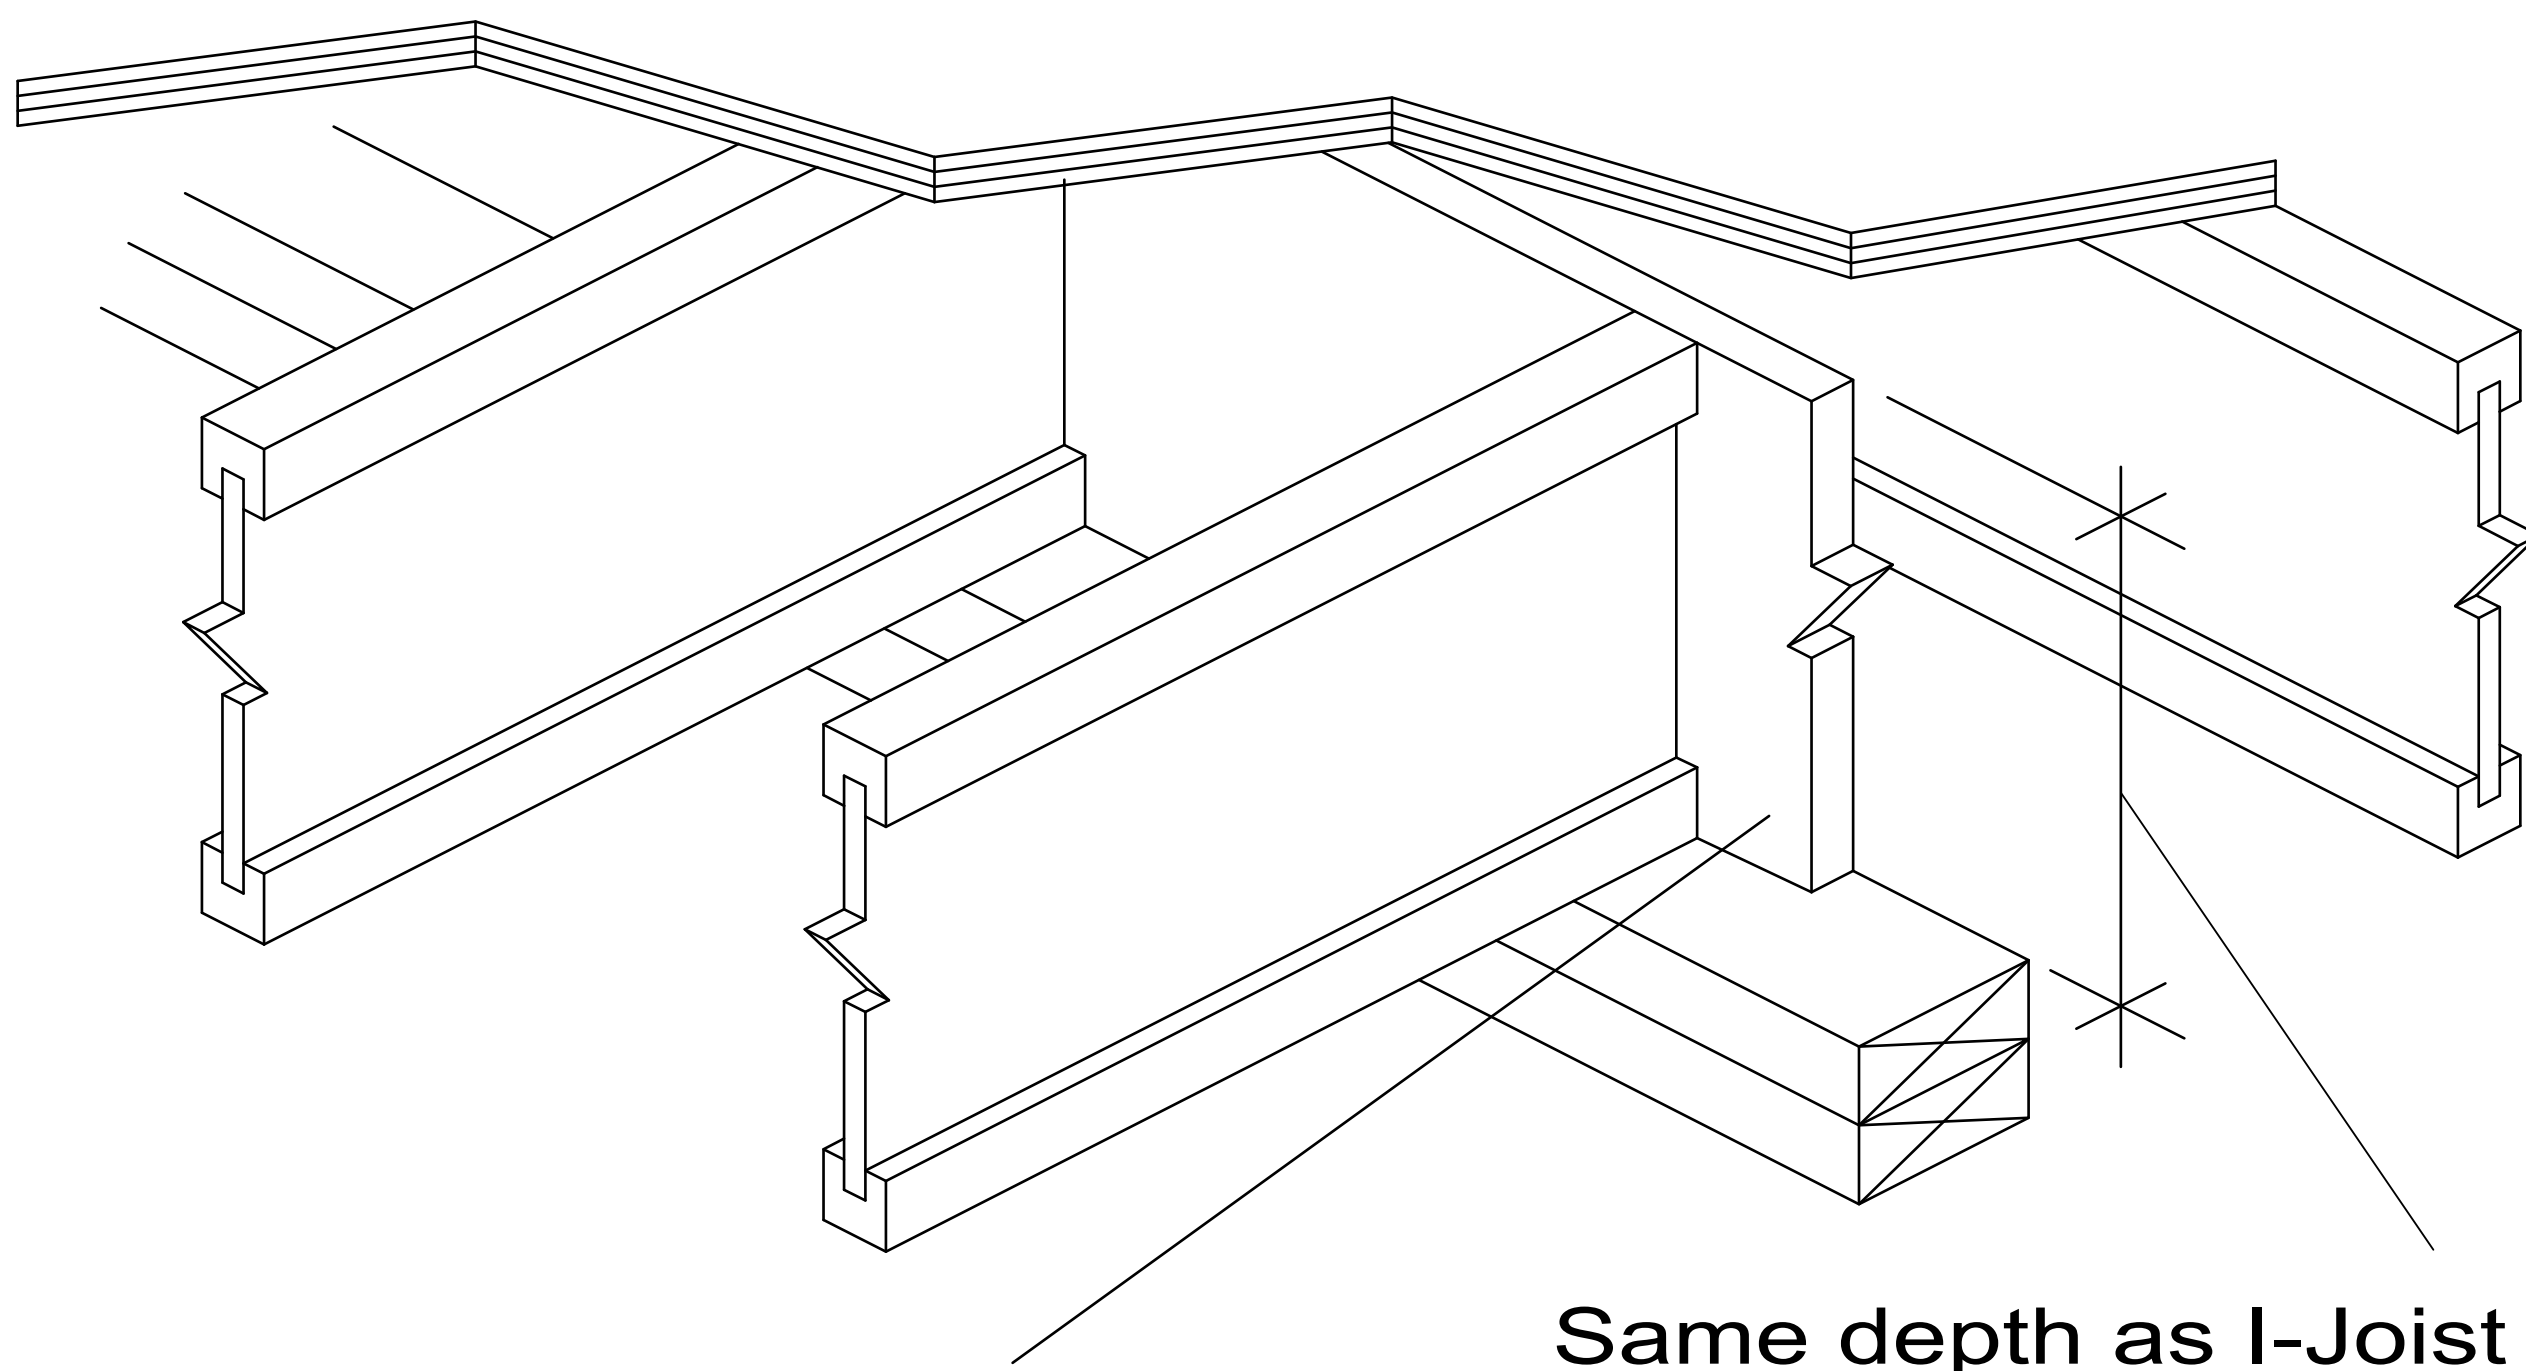

10d box nails at 6" oc toe-nailed  
from side away from I-Joists